DIP SWITCH 1		1	2	3	4	5	6	7	8
Hold Pair	Not Active	OFF							
(Take = Hold)	Active	ON							
Hopper Out Switch	Active High		OFF						
	Active Low		ON						
Type Of Pay Out	Pay Out Switch			OFF					
	Automatic			ON					
7 Card In Double Up	Lose				OFF				
·	Even				ON				
Double Up Game	70%					OFF			
Pay Out Rate	80%				·	ON			
Double Up Game	Off						OFF		
	On						ON		
	16							OFF	OFF
Bet Max	32							ON	OFF
	64							OFF	ON
	96							ON	ON

DIP SWITCH 2		1	2	3	4	5	6	7	8
	70%	OFF	OFF	OFF					
	65%	ON	OFF	OFF					
	60%	OFF	ON	OFF					
Pay Out Rate	55%	ON	ON	OFF					
	50%	OFF	OFF	ON					
	45%	ON	OFF	ON					
	40%	OFF	ON	ON					
	30%	ON	ON	ON					
	300				OFF	OFF			
Hopper Limit	500				ON	OFF			
	1000				OFF	ON			
	Unlimited				ON	ON			
Sound 100 Odds	Off						OFF		
	On					.:	ON		
Key In Type	В Туре							OFF	
	A Type							ON	
Type Of Coin D	D Type								OFF
,	C Type								ON

DIP SWITCH 3		1	2	3	4	5	6	7	8
	A TYPE			B TYI	PE				
Key In Rate	1Coin 100Credit	ON	ON	1Coir	50Cre	dit			
	1Coin 50Credit	OFF	ON	1Coir	25Cre	dit			
	1Coin 20Credit	ON	OFF	1Coir	10Cre	dit			
· · · · · · · · · · · · · · · · · · ·	1Coin 10Credit	OFF	OFF	1Coir	5Cred	lit			
	1Coin 10Credit			ON	ON				
Coin A Rate	1Coin 5Credit			OFF	ON				
	1Coin 2Credit			ON	OFF				
	1Coin 1Credit			OFF	OFF				
	C TYPE		D TY	PE					
	1Coin 5Credit		1Coin	2Cred	it	ON	ON		
Coin D Rate	1Coin 10Credit		1Coin	1Cred	it	OFF	ON		
	1Coin 25Credit		2Coin	1Cred	it	ON	OFF		
	1Coin 50Credit		5Coin	1Cred	it	OFF	OFF		
	1Coin 1Credit							ON	ON
Coin C Rate	1Coin 2Credit							OFF	ON
	1Coin 5Credit							ON	OFF
	1Coin 10Credit							OFF	OFF

DIP SWITCH 4		1	2	3	4	5	6	7	8
	Unlimited	ON	ON	ON					
	100,000	OFF	ON	ON					
	50,000	ON	OFF	ON					
Credit Limit	40,000	OFF	OFF	ON					
	30,000	ON	ON	OFF					
	20,000	OFF	ON	OFF					
	10,000	ON	OFF	OFF					
	5,000	OFF	OFF	OFF					
Display Credit Limit	On				ON				
	Off				OFF				
Bet Limit For	Limited					ON			
Center Super 7	Unlimited			·		OFF			
Minimum Bet For Bonus	8						ON		
	16						OFF		
Reel Speed	Fast							ON	
	Slow							OFF	
Hopper Out By Coin A	On								ON
	Off								OFF


DIP SWITCH 5		1	2	3	4	5	6	7	8
Display Of Doll On Demo	Displayed	ON							
	Not Displayed	OFF	-	:					
	20,000		ON	ON					
Coin In Limit	10,000		OFF	ON					
	5,000		ON	OFF					
	1,000		OFF	OFF					
	3-2-1				ON	ON			
Condition For 3	6-3-1				OFF	ON			
Kind Of Bonus	9-5-1				ON	OFF			
	12-7-1				OFF	OFF			
Display Of Doll On	Displayed						ON		
Frt & Ch Bonus	Not Displayed						OFF		
Coin Out Rate	10							ON	
	1							OFF	
Run Cards In Double Up	On								ON
	Off								OFF

DIP SWITCH 6	hida-yaa	1	2	3	4	5	6	7	_8
Card Type	Cards	OFF							
	Missiles	ON							
Type Of Double Up Game	Big/Small		OFF						
	Red/Black		ON						
Hold After 1st Hold	Not Active			OFF					
	Active			ON					
Royal Win	Not Active				OFF				
	Active				ON				
Joker	Not Active					OFF			
	Active					ON			
	No Win		-				OFF	OFF	OFF
	Any Pair						ON	OFF	OFF
	6 & Better						OFF	ON	OFF
One Pair Win Type	10 & Better						ON	ON	OFF
	J & Better						OFF	OFF	ON
	Q & Better				-		ON	OFF	ON
	K & Better						OFF	ON	ON
	Ace Pair						ON	ON	ON

DIP SWITCH 7		1	2	3	4	5	6	7	8
	1	OFF	OFF						
Minimum Bet To Play	6	ON	OFF						
·	8	OFF	ON						
	10	ON	ON						
	A Type			OFF	OFF				
Keys Panel Type	B Type			ON	OFF				
	C Type			OFF	ON				
	D Type			ON	ON				
Chance Bonus	Not Active					OFF			
	Active					ON			
Sound At Run And	Not Active						OFF		
Open Cards	Active						ON		
	CM Only Full Demo Of CM						OFF	OF <b>F</b>	
Main Game Type	Poker Only	Full D	emo O	f Pokei	r			ON	OFF
	Both Full Demo Of Both Games				OFF	ON			
	Both	Only	Logo D	emo of	Both G	ames		ON	ON

#### Panel A Type Hold #1 Hold #2 Hold #3 Hold #4 Hold #5 START BET TAKE W-UP **SMALL** BIG Panel B Type Hold #1 Hold #2 Hold #3 Hold #4 Hold #5 SMALL BIG W-UP TAKE **RET** START Panel C Type HOLD #1 HOLD #2 HOLD #3 HOLD #5 CANCEL HOLD #4 START BET W-UP BIG TAKE **SMALL** Panel D Type HOLD #1 HOLD #2 HOLD #3 HOLD #4 HOLD #5 CANCEL SMALL BIG W-UP TAKE BET START

Parts/Component	36	Solder
Side A	Pin	Side B
Video Red	1	Video Green
Video Blue	2	Video Sync
Speaker	3	Speaker GND
	4	
Hold #1 Key	5	
Hold #2 Key	6	
Hold #3 Key	7	Hold #4 Key
Service Coin Key	8	Hold #5 Key
Start	9	
Small / Odds	10	
Bet	11	
Take Score	12	
Double Up	13	
Cancel	14	
	15	
Big	16	
	17	
Coin A In	18	Key In
Coin C In	19	Coin D In (Hopper)
Book	20	Test
Pay Out	21	Key Out
Hopper Full	22	Hopper Switch
Meter: Coin A In	23	
Meter : B Key In	24	
Meter : Coin C In	25	
Meter:CoinDHopper	26	
Meter:Hopper Out	27	
Meter : Key Out	28	LackofHopperDriver
Lamp : Start	29	
Lamp : Cancel	30	
Lamp : Bet	31	
Lamp:Take Score	32	Lamp : Double Up
Lamp : Small	33	Lamp : Hold
Lamp : Big	34	Lamp : Hold
	35	
GND	36	GND

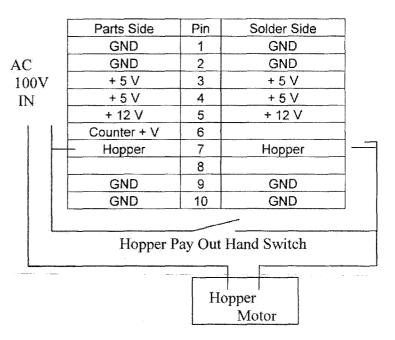

Counter + V Depends on Spec. of voltage.

Please connect + 5V or + 12V.