

## IGT S2000 Volume and Printer Adjustments.

By far the most common question on the IGT S2000 slot machines is "How do I adjust the volume?" Unlike its predecessor the S+ series, the S2000 does not have a physical volume control. Volume settings are done in software, but the procedure is not as difficult as it might appear. The following is a step by step procedure to adjust the machine volume.

### Adjusting Machine Volume

1. Open door and turn on the machine. Locate the CPU. The CPU is a plug in board located on the left side of the machine . It has 6 led's and a little white button.
2. Press and release the white button. Front Door display =[1 ACCOUNTING]
3. Press Cash Out 2 times. Front Door display =[3 OPTIONS]
4. Press Spin 1 time. Front Door display =[3.1 MACHINE OPTIONS]
5. Press Cash Out 1 time. Front Door display =[3.2 SOUND OPTIONS]
6. Press Spin 3 times. Front Door display = Volume Level
7. Press Cash Out to Increase Volume Level.
8. Press Service to Decrease Volume Level.
9. Once you have reached the desired Volume Level, press Bet Max 5 times.
10. Close and lock Front Door. You are now ready to play.

Some IGT S2000 machines are set up for Dollars in and tickets out instead of coins in and out. If this is the case on your machine you may wish to personalize the tickets that come out with your name etc. Although a bit more complex than adjusting the volume, most people feel that it is worth the effort to make the machine a little more personal and a little more fun. To accomplish this we will approach this task in much the same way as we did adjusting the volume. One thing that is different is that you do not want any credits on the machine when you program, so with the machine on and the door closed and locked either play all remaining credits or just hit cash out.