

# 1. Directory

- 1. Wiring diagram .....2
- 2. Button configuration ..... 4
- 3. Audit and system settings ..... 5
- Four. System and probability adjustment ..... 6
  - system setting..... 6
  - Probability adjustment ..... 7
- 5. System Adjustment ..... 8
  - Main gameplay instructions .....8
  - Wiring rules .....8
  - Free games .....9
  - Featured games ..... 10
  - Overall Award ..... 11
  - Overall Prize Magnification Table ..... 11
- 6. Error Messages ..... 12
- 7. Appendix: Game Record Table ..... 13

# 1. Wiring diagram

## 36 Wiring

Part face	36 Pins	Solder surface
	1	
Right channel (+)	2	Right channel (-)
Left channel (+)	3	Left channel (-)
Stop 1 button / reward button	4	
Stop 2 key	5	
Stop 3 button / Continue button	6	
Stop 4 key	7	
	8	
Start button / Score button / Full stop button	9	
Stop 5 key / bet key	10	
Automatic game keys	11	
Maximum bet key	12	
Description key	13	
	14	
	15	
	16	
Banknote machine	17	
Coin key	18	Split key
	19	
Audit key	20	Test key
Refund button	twenty one	Wash key
	twenty two	Refund / Return Lottery Motor Switch
	twenty three	
Score table	twenty four	
Banknote table	25	
Coin Table	26	
Refund table	27	Jackpot Lights
Washing table	28	Jackpot lights
Lamp: Start button / Score button / Full stop button	29	Lamp: Stop 1 button / reward button
Lights: Stop 5 keys / bet key	30	Lamp: Stop 2 button
Lights: automatic game keys	31	Lights: Stop 3 button / Continue button

Part face	36 Pins	Solder surface
Lamp: Maximum bet key	32	Light: Stop 4 key
Lamp: Help button	33	
	34	Refund lamp

	35	
Ground	36	Ground

### 10 Wiring

Part face	10 Pins	Solder surface
GND	1	GND
GND	2	GND
+ 5V	3	+ 5V
+ 5V	4	+ 5V
+ 12V	5	+ 12V
	6	
Refund / Refund Lottery Motor SSR	7	
	8	
Ground	9	Ground
Ground	10	Ground

## 2. Button configuration

## 3. Audit and system settings

Audit process

## 4. System and probability adjustment

Press **[Check Account]** → **[System Information]** → **[Enter Password]** → **[System Adjustment]** to select the required adjustment  
The whole project.

### system setting

project	Setting options	Factory setting
Maximum bet	45, 90, 180, 270, 360, 450	450
Minimum bet	45, 90, 180, 270, 360, 450	45
Coin ratio	1, 2, 5, 10, 20, 25, 40, 50, 75, 100, 150, 200, 300, 500, 1000, 2000, 3000, 4000, 5000, 10000, 20000	100
Score ratio	1, 2, 5, 10, 20, 25, 40, 50, 75, 100, 150, 200, 300, 500, 1000, 2000, 3000, 4000, 5000, 10000, 20000	1000
Banknote ratio	1, 2, 5, 10, 20, 25, 40, 50, 75, 100, 150, 200, 300, 500, 1000, 2000, 3000, 4000, 5000, 10000, 20000	100
Washing ratio	1, 2, 5, 10, 20, 25, 40, 50, 75, 100, 150, 200, 300, 500, 1000, 2000, 3000, 4000, 5000, 10000, 20000	1000
Maximum score	50000, 100000, 200000, 300000, 400,000, 500000	500000
System break	200000, 500000, 1000000, 2000000, 3000000, 4000000, 5000000	5000000
Continue to play	500, 1000, 2000, 3000, 4000, 5000, 10000, 200,000, 250,000	250000
Model music	Yes, no	no
The main game background music	there, no	Have
Cash in	Yes, no	no
Score	Yes, no	Have
Wash	Yes, no	Have
Coin	Yes, no	Have
Withdraw points	Yes, no	Have
Automatic withdrawal	Yes, no	no
Automatic refund points	5000, 10000, 20000, 30000, 50000	5000
Lottery ratio	100, 200, 250, 500, 1000, 2000, 2500, 5000, 10000	100
Withdrawal mode	Money back, lottery ticket refund	Refund
Refund machine mode	NO, NC	NO

Precautions:

1. System setting password factory default value: Press the **[Start key]** 8 times.
2. When the refund is **[None]**, the system will hide the options of **[Auto Refund]** and **[Auto Refund Score]**.
3. When the automatic refund is **[Off]**, the system will hide the **[Automatic Refund Score]** option.

## Probability adjustment

Press [Check Account ] → [System Information] → [Enter Password] → [Probability Adjustment] to select the required adjustment

The whole project.

project	Setting options	Factory setting
Main game odds	95.0%, 95.5%, 96.0%, 96.5%, 97.0%, 97.5%, 98.0%, 98.5%, 99.0%, 99.5%, 100.0%	98.0%
Double the game probability	97.0%, 98.0%, 99.0%	98.0%

## 4. System adjustment

### Main gameplay instructions

"Fafafa" is a 15-round 9-line game with a free runner game and a feature Games, a continued game. After the player inserts the coin, press the [Bet Points] or [Max Bet Points] button to perform the bet transfer Work, and then press the [Start] or [Auto] button to start the runner; after the runner stops, it will automatically start the match, On the specified line, from left to right or from right to left, more than three identical patterns appear consecutively, you can get the corresponding multiple After winning the game, players can also choose to score or enter the continuation game.

Runner area

AUTO PLAY:

1. Automatic mode is divided into general and fast two-stage mode
2. After pressing the 『Auto Key』, it becomes the automatic mode 1
3. After pressing the "Auto key" again, it becomes the automatic mode 2
4. Press "Auto key" again to return to normal mode

"Fafafa" main game screen

### Connection rules

Schematic diagram of connection rules

### Free games

When the main game appears any more than 3 (inclusive) and trigger free games; free games

Any 3 (inclusive) or more in the number of innings

Patterns can increase the number of free games.

5 Play 50 free games

4 Play 20 free games

3 Play 10 free games

Each game is randomly given from Golden Bat 1 to 3

Line up Pattern, and stop

All on the screen after the round Pattern, metropolis

Expand into a whole string, greatly increasing the chance of full prizes!

## Featured games

When the game is stopped, more than two (inclusive) pattern,

The patterns will unfold in series, greatly improving the chance of winning!



## Overall Award

When the game stops, except for the blond hair pattern and silver hair pattern, the rest of the patterns are the same, you can get the picture  
The overall award for the case! Players in the main game or free game are triggered by the opportunity to win the full prize opportunity.

## Overall Prize Multiplier Table

## 5. Error Message

Message type	Processing method
Cash box is empty	Please make up the currency and press the <b>[open key]</b> and <b>[check account key]</b> to cancel the error message interest.
Refund error	Please check whether the coin refund machine has card currency or other faults, and eliminate the fault Press <b>[Open Minute Button]</b> and <b>[Check Account Button]</b> to clear the error message.
Lottery is empty	Please fill new lottery press <b>[ ]</b> to open sub-key and <b>[ ]</b> key audit released Error message.
Refund error	Please check whether the lottery machine has a card lottery or other failures, eliminate the cause Press <b>[Open Minute Button]</b> and <b>[Check Account Button]</b> to cancel the error message.
Coin error	Please check the slot machine for card coins or other failures, and eliminate the failure Press <b>[Open Minute Button]</b> and <b>[Check Account Button]</b> to clear the error message.
Scoring error	Please press <b>【 Check Account】</b> to enter system information and execute system reset Actions.
Wrong points	Please press <b>【 Check Account】</b> to enter system information and execute system reset Actions.
Betting error	Please press <b>【 Check Account】</b> to enter system information and execute system reset Actions.
Score has reached the upper limit	Please press <b>[Wash Points]</b> to wash the scores to clear the error message.
Record limit	Please press <b>【 Check Account】</b> to enter system information and execute system reset Actions.

## 6. Appendix: Game Record Form

### Hair Hair game record record table

Business hall location	Meter reading date		
Terrace	version	1 Minute	=
Main game odds	Odds	Market value	
	Main game record	Free game record	Double game record
Cash in	Free games	Total play	
Coin	Free game score	Total wins	
Refund	Overall Award Record		percentage
Score	Total prizes	Total play score	
Wash	Overall Award Score	Total win points	
Progressive score		percentage	
Total refund points		Bibi	
Revenue		Fence times	
percentage		Fortuna Times	
Total play score			
Total win points			
percentage			
Total play			
Total wins			
percentage			

NOTES:

NOTES:

NOTES:

NOTES:

