

Gamemaker set chip

1. Power off and remove Board Drawer
2. On Top bank of red switches turn on switch 7 and 8
3. Remove game chip in pos ten and install set chip
4. Insert board in machine and power on hit start game deal draw button
5. Machine will clear and tell you to remove set chip
6. Power off, remove drawer, turn 7 8 off and replace game chip in pos 10
7. Power up and follow instructions using the set key to enter data and move to next option
 - ? Jurisdiction = 5
 - ? Tournament off
 - ? Coin = yes or no for optic board and HAPP = NR or number on comparator
 - ? Denom = 25
 - ? Set for optic door or mechanical white door switch
 - ? Det for WBA or DBV or no bills