

IGT S2000 Volume and Printer Adjustments.

By far the most common question on the IGT S2000 slot machines is "How do I adjust the volume?" Unlike it's predecessor the S+ series, the S2000 does not have a physical volume control. Volume settings are done in software, but the procedure is not as difficult as it might appear. The following is a step by step procedure to adjust the machine volume.

Adjusting Machine Volume

1. Open door and turn on the machine. Locate the CPU. The CPU is a plug in board located on the left side of the machine . It has 6 led's and a little white button.
2. Press and release the white button. Front Door display =[1 ACCOUNTING]
3. Press Cash Out 2 times. Front Door display =[3 OPTIONS]
4. Press Spin 1 time. Front Door display =[3.1 MACHINE OPTIONS]
5. Press Cash Out 1 time. Front Door display =[3.2 SOUND OPTIONS]
6. Press Spin 3 times. Front Door display = Volume Level
7. Press Cash Out to Increase Volume Level.
8. Press Service to Decrease Volume Level.
9. Once you have reached the desired Volume Level, press Bet Max 5 times.
10. Close and lock Front Door. You are now ready to play.

Some IGT S2000 machines are set up for Dollars in and tickets out instead of coins in and out. If this is the case on your machine you may wish to personalize the tickets that come out with your name etc. Although a bit more complex than adjusting the volume, most people feel that it is worth the effort to make the machine a little more personal and a little more fun. To accomplish this we will approach this task in much the same way as we did adjusting the volume. One thing that is different is that you do not want any credits on the machine when you program, so with the machine on and the door closed and locked either play all remaining credits or just hit cash out.

Setting Ticket Printer Data

1. Open door and turn on the machine. Locate the CPU. The CPU is a plug in board located on the left side of the machine . It has 6 led's and a little white button.
2. Press and release the white button. Front Door display =[1 ACCOUNTING]
3. Press Cash Out 2 times. Front Door display =[3 OPTIONS]
4. Press Spin 2 times. Front Door display =[3.1.1 CREDIT OPTIONS]
5. Press Cash Out 9 times Front Door display =[3.1.10 PRINTER]
6. Press Spin 2 times to select the Printer menu to configure the ticket printer.

NOTE: The Printer configuration screens cannot be accessed if the ticket printer is not enabled.

7. There are 3 fields that can be customized on the ticket. They are Name, Address 1 and Address 2. You can navigate through these three fields via the Spin Button.
8. Choose the character you wish the ticket to print using the Cash out and Service buttons. Place the character using the Bet One button.
9. When you have the display the way you want it, press the Bet Max 5 times to back out of the menus.
10. Close and lock Front Door. You are now ready to play.

Reloading Tickets

Once your current supply of tickets is depleted, it will be necessary to reload a new stack of tickets. Open the front door and pull out the ticket printer drawer. Remove the band from the stack of tickets, place them in the drawer with the PRINTED (not the side with the words "Insert this side up") side up, with the index marks toward the front of the machine. Feed the top ticket, printed side up index first into the slot on the top of the printer. The printer will sense the ticket, pull it in and index it. Close the printer door. Next insert the flat brass audit key into the slot on the right side of the machine and turn it once. Close and lock the door and you should be "Good to Go". If the front display still says paper out, open the door checked that the paper is loaded correctly, turn power off, wait 5 seconds, turn power on. Close and lock door.