## SUPER POKER

## V306119

SW1	LEVEL	1	2	3	4	5	6	7	8
HOLD MODE	HOLD WIN	OFF							
HOLD WIODE	AUTO HOLD	ON							
MAX PLAY	8		OFF	OFF					
	10		ON	OFF					
WAX PLAT	50		OFF	ON					
	100		ON	ON					
	1				OFF	OFF			
MIN. PLAY	5				ON	OFF			
	10				OFF	ON			
	20				ON	ON			
TICEKT PAYOUT	OFF						OFF		
HOLKI FATOOT	ON						ON		
PAYOUT MODE	MANUAL							OFF	
PATOUT MODE	AUTO							ON	
SYSTEM LIMIT	OFF								OFF
JIJILW LIMIT	ON								ON

SW2	LEVEL	1	2	3	4	5	6	7	8
MAIN RATE	50%	OFF	OFF	OFF					
	60%	ON	OFF	OFF					
	65%	OFF	ON	OFF					
	70%	ON	ON	OFF					
WAIN KATE	75%	OFF	OFF	ON					
	80%	ON	OFF	ON					
	85%	OFF	ON	ON					
	90%	ON	ON	ON					
W-UP RATE	75%				OFF	OFF			
	80%				ON	OFF			
	85%				OFF	ON			
	90%				ON	ON			
SHOW DISCARD	HOLD						OFF		
SHOW DISCARD	DISCARD						ON		
PASSWORD	OFF							OFF	
	ON							ON	
W-UP GAME	NO								OFF
W-OF GAIVIL	YES								ON

SW3	LEVEL	1	2	3	4	5	6	7	8
HAND COUNT	NO	OFF							
HAND COON I	YES	ON							
PLAY SCORE	NO		OFF						
PLAT SCORE	YES		ON						
BOX SCORE	NO			OFF	OFF				
	YES			ON	OFF				
DOX SCORE	10 TIMES			OFF	ON				
10 1110	10 TIVIES			ON	ON				
AUTO TICKET	NO					OFF			
AUTO TICKLI	YES					ON			

## Remark:

- 1. The function of AUTO TICKET will be work when the state of Box Score is not on "NO".
- 2. When the setting of Box Score = 10 Times  $\,^{,}$  W-UP GAME is disable even the setting of W-UP game in Yes mode.

## SYSTEM SETUP:

STOTEWOOL TOT .		
COIN RATE		
KEY IN RATE	1,2,4,5,10,15,20,25,40,50,60,75,80,100	0,200,250,400,
KETOUT RATE	500,1000	
TICKET RATE	·	
GAME TICKET SET	1, 2, 3, 4, 5, 8, 10, CONTINUOUS	CONTINUOUS

PARTS SIDE		SOLDER SIDE
GND	1	GND
GND	2	GND
+ 5V	3	+ 5V
+ 5V	4	+ 5V
+12V	5	+12V
COUNTER POWER	6	
	7	
	8	
	9	
GND	10	GND
•		

PARTS SIDE		SOLDER SIDE
VIDEO RED	1	VIDEO GREEN
VIDEO BLUE	2	VIDEO GREEN  VIDEO SYNC
SPFAKER	3	GND
JI EAREN	4	CIAD
	5	
	6	
	7	
	8	
START   1/2 W-UP	9	
HOLD 1   SMALL	10	
HOLD 5   PLAY   2 W-UP	11	
HOLD 4   TAKE	12	
HOLD 3   W-UP	13	
	14	
	15	
HOLD 2   BIG	16	
•	17	
COIN A	18	KEY IN
	19	COIN C
OPERATOR (RECORD)	20	TEST
TICKET PAYOUT	21	KEY OUT
	22	TICKET SWITCH
COIN A METER	23	
KEY IN METER	24	
	25	
COIN C METER	26	
OUT METER	27	TICKET CONTROL
001	28	
LAMP: START   1/2 W-UP	29	
LAMP: HOLD 1   SMALL	30	
LAMP: HOLD 5   PLAY   2 W-UP	31	
LAMP: HOLD 4   TAKE	32	
LAMP: HOLD 3   W-UP	33	
LAMP: HOLD 2   BIG	34	
ATTENDANT	35	
GND	36	GND