


CHERRY MASTER

DIP SWITCH #1		1	2	3	4	5	6	7	8
Not Used									
Hopper Out Sw	Active Low		OFF						
	Active High		ON						
Type Of Payout @ IN	Payout SH			OFF					
	Automatic			ON					
DoubleUp	LOST				OFF				
	Even				ON				
DoubleUp Pay rate	80%					OFF			
	90%					ON			
DoubleUp ON/OFF	ON						OFF		
	OFF						ON		
Bet Max	8 Bet							OFF	OFF
	16 Bet							ON	OFF
	32 Bet							OFF	ON
	64 Bet							ON	ON

DIP SWITCH #2		1	2	3	4	5	6	7	8
Main Game Pay-Rate	90 86% 80	OFF	OFF	OFF					
	85 78% 75	ON	OFF	OFF					
	80 70% 70	OFF	ON	OFF					
	75 62% 65	ON	ON	OFF					
	70 54% 60	OFF	OFF	ON					
Hopper Limit	65 46% 55	ON	OFF	ON					
	60 38% 50	OFF	ON	ON					
	55 30% 45	ON	ON	ON					
Sound On/Off Odds over 100	300				OFF	OFF			
	500				ON	OFF			
	1000				OFF	ON			
	Unlimited				ON	ON			
Type of Kcy in	ON						OFF		
	OFF						ON		
Bet Limit for Center Super 7	D Type							OFF	
	C-Type							ON	
Unlimited	Unlimited								OFF
	Limited								ON
Number is fixed by 4-6									

DIP SWITCH #5		1	2	3	4	5	6	7	8
Display of Doll on Demo	Display	ON							
	Undisplay	OFF							
Coin in Limit	20,000		ON	ON					
	10,000		OFF	ON					
	5,000		ON	OFF					
	1,000		OFF	OFF					
Condition for 3 Kind of Bonus	3-2-1				ON	ON			
	6-3-1				OFF	ON			
	9-5-1				ON	OFF			
	12-7-1				OFF	OFF			
Disp. of Doll at All Fr. Bonus	High						ON		
	Low						OFF		
Not Used									
Test Mode for Disp. of Doll	Test-mode								ON
	Usual								OFF

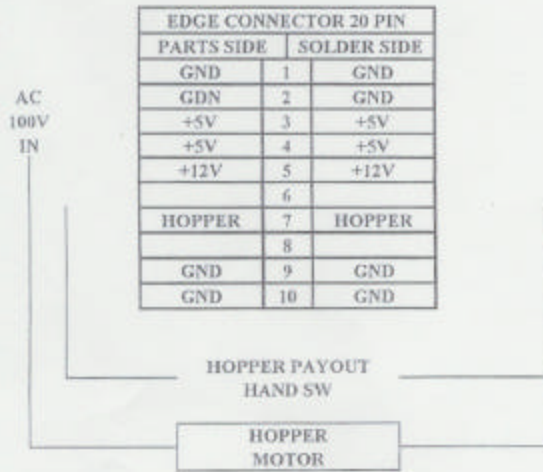

EDGE CONNECTOR 72 PIN		
PARTS SIDE		SOLDER SIDE
VIDEO RED	1	VIDEO GREEN
VIDEO BLUE	2	VIDEO SYNC.
SPEAKER	3	SP. GND
	4	
	5	
	6	
	7	
SERVICE COIN	8	
START	9	
ODDS SMALL	10	
BET	11	
TAKE SCORE	12	
DOUBLE UP	13	
	14	
	15	
BIG	16	
	17	
COIN A	18	KEY IN
COIN C	19	COIN D (HOPPER)
ANALIZER	20	CONFIRM
PAYOUT	21	KEY DOWN
HOPPER FULL	22	HOPPER SW
COUNTER A	23	
COUNTER B	24	
COUNTER C	25	
COUNTER D	26	LACK OF HOPPER COUNTER
HOPPER COUNTER	27	
KEY DOWN COUNTER	28	
START LAMP	29	
CANCEL LAMP	30	
BET LAMP	31	
TAKE SCORE LAMP	32	
DOUBLE UP LAMP	33	
	34	
	35	
GND	36	GND