
Instructions for Paper Reel Replacement

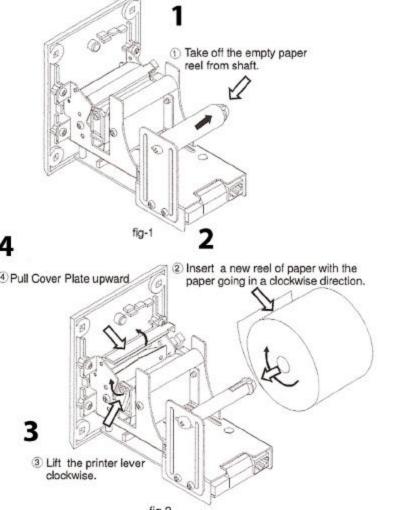

5 ⑤ Draw the paper through the printer roller and pass between the cutter and cover plate, out through the front plate, fig-3 Push the cover plate downward until it's beneath the outcrop and you hear a click.

7 Pull the Printer lever

back counterclockwise.

fig-4