

Setting Ticket Printer Data

1. Open door and turn on the machine. Locate the CPU. The CPU is a plug in board located on the left side of the machine . It has 6 led's and a little white button.
2. Press and release the white button. Front Door display =[1 ACCOUNTING]
3. Press Cash Out 2 times. Front Door display =[3 OPTIONS]
4. Press Spin 2 times. Front Door display =[3.1.1 CREDIT OPTIONS]
5. Press Cash Out 9 times Front Door display =[3.1.10 PRINTER]
6. Press Spin 2 times to select the Printer menu to configure the ticket printer.

NOTE: The Printer configuration screens cannot be accessed if the ticket printer is not enabled.

7. There are 3 fields that can be customized on the ticket. They are Name, Address 1 and Address 2. You can navigate through these three fields via the Spin Button.
8. Choose the character you wish the ticket to print using the Cash out and Service buttons. Place the character using the Bet One button.
9. When you have the display the way you want it, press the Bet Max 5 times to back out of the menus.
10. Close and lock Front Door. You are now ready to play.