



IGT SLOT ERROR CODES and FIXES

[Pachislo Slot Machines](#)

[Home](#)
[Our Story](#)
[Links](#)
[Warranty](#)
[Testimonials](#)
[Site map](#)
[Terms](#)



[PRODUCTS](#)

[Overseas Slots](#)
[Las Vegas Slots](#)
[JVL Machines](#)
[Pachinko](#)
[Antique Slots](#)
[Tokens & Extras](#)
[Slot Stands](#)
[Cherry Masters](#)
[Currency Counters](#)
[Casino Gifts](#)
[Gum Machines](#)
[Pedal Cars and Planes](#)
[Specials](#)
[Customer Photos](#)

[Our Partners](#)

Join Our Mailing List

Email:

Go

For Email Marketing you can trust

[CONTACT US](#)

[LATEST NEWS](#)



[Click for Service & Support](#)

credit card



[View Cart](#)

[EB 9000 Money Counter](#)



Great Price:
Was ~~\$375~~

NOW \$199

Special Sale Price


[BUY](#)

[View Cart](#)

Ships in 48 Hours of order receipt or less



[Great Gift Idea](#)

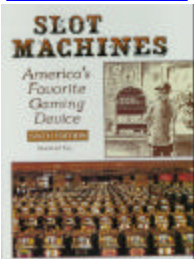

[History of Slot Machines, beautiful 11x14 glossy illustrated 265 page book, full of pictures](#)

only \$35.99

[A must for anyone who loves slot machines](#)

[Learn More](#)

Error Code	Error Description	Most Common Repair (if these do not work, contact us)
12	Battery Voltage has dropped below 2.9 V Replace ASAP due to possible RAM (memory) corruption.	Turn power off - Turn power on
		Open / close door to clear
		Replace 3.6 V Lithium battery on CPU board
21	Coin In Error	Verify that comparator is seated in all four acceptor clips
		Verify that acceptor does not have coin(s) jammed
		Verify that the coin optics is not blocked (below comparator)
		Ensure toggle power switch in activated (if installed)
3100	Coin Out Tilt (Hopper)	Check for and clear any jammed coins in the coin out channel.
		Verify that coins are not jammed behind hopper knife
		Check the coin out optic sensor for blockage or dirty surface
		Replace hopper coin out optic
3200	Extra Coin Out (Hopper)	Verify that the hopper motor brake functions
		Check the coin wiper/ knife for jams - Adjust if necessary
3300	Hopper Empty	This is the most common error that new slot machine owners will have because the cash out button was pushed and the number of coins in the hopper is less than the total credits to be paid out. Open the main door and check the hopper for coin level (your hopper will not dispense all of the coins), refill and close the main door. You may have to do this several times for all of the credits to be paid out.
41	Reel #1 Tilt	Designated reel is misaligned or malfunctioning. Verify reel is not unplugged. Switch connectors from one reel to another, determine if error follows change of connectors. Try replacing reel assembly or optics if error stays with bad reel. Clear Ram
42	Reel #2 Tilt	
43	Reel #3 Tilt	
44	Reel #4 Tilt	
45	Reel #5 Tilt	
49	Reel Mechanism Disconnected	Verify reels are not unplugged
During the process of clearing error codes, you may encounter multiple 6x series errors. Just follow the information below in the "Most Common Repair" column which matches the error code on the door display.		



61	CMOS RAM Error	Bad (or cleared) CMOS RAM data Press test button 3 seconds Error code 61-1 should now be displayed Follow 61-1
61-1	Game Data Reset	Close door - turn and release reset key once
62	Bad Game EPROM	Check circuit board - replace Game EPROM
62-1	Data EPROM Error	Check circuit board - replace Reel EPROM
65-0	Bad EPROM Device	Press self test switch for 3 seconds If error will not clear replace EPROM
65-1	Bad EPROM Data	Processor could not read or write to the named chip Press test button for 3 seconds Error code clears from display - Close door
65-2	Game Type Mismatch	
65-3	EPROM / Game Data Changed	Close door - turn reset key Error Code 65-1 or 65-2 appears in display Follow 65-1 or 65-2
66	Game EPROM Changed	Turn power off - Turn power on
67	Data EPROM Changed	
68	Invalid Data EPROM	Change to valid Data EPROM

Count- Money	1st Discount Slot Machines	SlotDog
------------------------------	--	-------------------------

Best Viewed with Microsoft Windows 95 or higher.

Copyright © 2007, Mitchell Enterprises

610-687-5884 or Fax 610-687-2126

Reproduction or borrowing of our html, text, images or layout is not permitted, no exceptions All other trademarks and copyrights are trademarks and copyrights of their respective owners. Protected under the new Millennium Copyright Law Act, 17 U.S.C. 512 © 2000-2002, All rights reserved