

# MILLS

## BELL MACHINE PARTS

and

## SERVICE MANUAL



Mills

## GENERAL INSTRUCTION

### HOW TO LOAD MACHINE FOR OPERATION

Remove back door and frame lever "BA" (Photo #5) as far as it will go. Insert coins into coin chute one at a time. Pull handle after each coin is inserted. Load until coin tube and jackpot is loaded. Coins automatically flow into jackpot after coin tube is loaded. When coins start to flow into coin box, both jackpots are loaded, then push lever "BA" (Photo #5) back to its original position. Replace door and machine is ready for operation.

### HOW TO REMOVE MECHANISM FROM CASE

Remove back door. Remove top rear section Code "E" (Photo #1) by lifting catches Code "F" & "G" (Photo #2) then remove two thumb screws located at back right and left side clamps of mechanism base. Raise mechanism clamps "M" & "N" (Photo #2) and slightly raise and pull out mechanism.

When replacing mechanism be sure that operating lever for Code "AB" (Photo #5) is in proper position below handle starting lever, Code "L" (MLB-5936-CSP) (Photo #2). Care should be taken to see that none of the levers or springs are bent or broken as mechanism is being replaced into case. Be sure to securely fasten mechanism into case with thumb screws and by lowering mechanism clamps.

CAUTION: To avoid bending jackpot trip lever when inserting mechanism into case, jackpot to be closed and payout slides to be in the out position.

CAUTION: When inserting or removing mechanism from case, hold 7-7-7 payout lever (Photo #6 Code XX) out to prevent jamming of 7-7-7 token award chute lever.

### IF JACKPOT FAILS TO DELIVER

When replacing mechanism be sure that jackpot is closed and payout slides are in the out position. See that operating lever Code "AB" (FOK-3297-A-CSP) (Photo #5) is in the proper position below handle starting lever Code "L" (MLB-5936-CSP) (Photo #2).

Check spring Code "AE", "AD" and "AL" (Photo #8) to see if they are stretched out of shape or broken.

See that shoulder screw Code "AM" (Photo #8) does not become tight so as to bind lever Code "D" (Photo #8) from working freely.

### IF RESERVE JACKPOT FAILS TO DELIVER

See that springs Code "AB" and "AE" which operate lever Code "C" (Photo #8) are not broken or stretched out of shape or that screw Code "J" (Dog Point Screw) (Photo #8) does not bind lever Code "H" (Photo #8).

See that lever "XX" (Photo #8) drops down to engage in notch of push bar Code "T" (Photo #4) after jackpot is delivered.

The correct operation of reserve jackpot is as follows: On next play following jackpot lever "XX" (Photo #8) is engaged with push bar Code "T" (Photo #4) and push bar Code "T" then starts to travel forward and at the same time spring Code "AA" (Photo #8) causes lever Code "C" (Photo #8) to fall behind reserve locking lever Code "F" (Photo #8) and jackpot will close and reserve jackpot will open as handle is pulled down. Reserve jackpot will stay open until next play when lever Code "D" (Photo #8) engages into notch of push bar Code "T" (Photo #4). Then push bar Code "T" travels forward and releases operating lever dog Code "C" (Photo #8) to close reserve jackpot.

### WHEN MECHANISM FAILS TO DELIVER PROPER NUMBER OF COINS

If mechanism delivers too many coins at intervals, the trouble in most cases is that a few thin or undersize coins have been played in succession and stacking up in your coin tube they do not cover correct area of standard size coins.

If mechanism repeatedly pays out too many coins or pays short, or does not pay at all, check up payout mechanism thoroughly as follows: First see that there are plenty of coins in coin tube and that they lay flat in tube. Examine payout slides (Photo #3) to see that coins are not wedged in opening. This would prevent machine from paying out. If coins are wedged in payout slides, unhook springs from bracket Code "H" (Photo #6) remove payout slide stop Code "D" (Photo #3) then remove payout slides and examine bronze springs to see that they are not loose. If so, reset same and see that they are level with outside runner of payout slides. Ends of bronze springs are formed up about 1/8 inch and are intended to prevent coins from slipping between slides. If formed end of bronze spring is broken off it should be replaced.

When replacing payout slides back into mechanism, slides and coil springs must be replaced in order removed. If coil springs are stretched or detached lever cannot be pulled in proper position for payout.

Examine perpendicular levers Code "A, C, E, G, J, & L" (Photo #5) and coil springs Code "B, D, F, H, K, & M" (Photo #5) to see that levers are not bent and springs are not stretched or detached.

See that payout slide push bar Code "AF" (Photo #3) moves payout slides forward about 1/8 inch beyond payout slide stop lever Code "AH" (Photo #3). This will let payout slide stop lever to swing inward and stop slides from going in against lower payout levers Code "U, W & T" (Photo #6) when reels begin to revolve. Timing lever Code "AW" (Photo #3) thus will start traveling backward from action of clock spring Code "G" (Photo #6) and lock lever Code "AH" (Photo #6) will release payout slides as timing lever releases disc stop levers Code "A, B, & C" (Photo #4) and cause them to fall against reel stop stars.

See that spring Code "AG" (Photo #3) which connects payout slide push bar Code "AF" (Photo #8) with operating fork is not stretched or broken.

### HOW TO DRAIN CONTENTS OF MACHINE

Remove back door. Hold coin detector operating lever Code "S" (Photo #5) with finger to keep it from traveling forward as handle is pulled down. When handle is pulled down reels will start to spin, then move lower payout slide stop levers Code "R, S, & T" (Photo #6) with finger slightly to the left. Thus disengaging said levers from payout slide. This action will cause 20 payout and jackpot to deliver. Keep repeating same operation until machine is empty.

#### IF REELS FAIL TO REVOLVE

See that grab hook on arm of reel operating lever Code "F" (Photo #3) travels upward and along edges of all three large steel reel discs until it drops into notches properly. This grabbing action sets reels in motion when operating fork dog Code "AE" (Photo #5) releases from Fork stop pin Code "BG" (Photo #5 as handle is pulled down.

See that disc stop lever Code "AR" (Photo #3) prevents discs from moving before grab hook Code "F" (Photo #3) sets reels into motion, and that disc stop lever Code "AR" (Photo #3) swings back to give reels room to revolve.

Be sure clock assembly Code "F" (Photo #6) which is the timer for mechanism is in good working order and operates freely.

See that clock spring Code "G" (Photo #6) is not stretched out of shape or broken.

#### HOW TO ADJUST SPEED REELS

Careful attention in adjusting speed of reels should be taken. Improper adjustments might result in serious damage. If reels spin too fast and stop with jarring bounce, tighten brake spring Code "X" (Photo #6). The reels then should stop at about the same time that reel stop levers Code "A, B, & C" (Photo #4 fall against reel stop stars. To speed up reels, bend ends of clock fan on clock Code "F" (Photo #6. To slow up reels straighten out ends of above mentioned clock fan.

#### HOW TO REMOVE REELS ASSEMBLY FROM MECHANISM

Remove mechanism from case.

Play machine by holding coin detector lever Code "S" (Photo #5) back to keep it from traveling forward. Play mechanism thru by operating main operating lever Code "AB" (Photo #5).

When reels spin stop clock fan, hold clock fan by laying a screw driver across operating fork and clock fan.

Remove reel brake wires Code "X" (Photo #6). Loosen shoulder screw Code "J" (Photo #4). Unscrew and remove reel shaft Code "H" (Photo #4) lift reels upward and from machine.

To replace reels reverse the above mentioned process.

After reels are replaced, shaft and shoulder screw Code "J" are to be tightened. Reel brake wire adjusted. Operate main operating lever Code "AB" (Photo #5) thru to spin reels to check for proper spinning of reels. See how to adjust speed of reels.

#### HOW TO REMOVE REEL OPERATING LEVER ASSEMBLY

To remove reel operating lever assembly Code "F" (Photo #3) from mechanism assembly, remove coin tube assembly Code "X" (Photo #4). Unhook extension spring Code "H" (Photo #3) at bracket Code "H" (Photo #6) turn grab hook towards front of mechanism so that top end of grab hook clears reel discs - slip grab hook of stud holding assembly.

To assemble grab hook to mechanism reverse the procedure followed above.

CAUTION: When replacing coin tube assembly, be sure that coin overflow push out lever Code "U" (Photo #3 is in slot at upper end of coin tube.

Failing to follow the above instructions will result in jamming coin tube.

Mills Bells are sufficiently lubricated when they are shipped to take care of heavy working parts for six months. When necessary to lubricate heavy working parts use vaseline in spots where friction is created.

Bearings should be oiled every six months with best grade sewing machine oil.

Clean clock works frequently with gasoline to remove grit from teeth of pinions. Put a few drops of 3-in-1 oil or any good grade sewing machine oil on each pinion. Do not use a cheap, heavy lubricating oil for this purpose.

Under no circumstances should pay-out slides be oiled or greased as this will cause them to stick. Slides should be cleaned frequently with gasoline and see that they are kept free from dirt at all times.

All springs, screws, nuts and levers should be inspected occasionally to see that they are in perfect operation.

Before making any adjustments for any troubles which may arise, first check to see that all springs are in place and are not deformed, or broken. Also check to see that all screws are tight. If screws are found loose and they control an adjustment then that particular adjustment must be checked before tightening screws per General Instructions.

#### HOW TO CLEAN COIN CHUTE

Lint and dirt from player's pocket gather on coins and when inserted into chute sometimes cause coin chute to stick or clog. To clean chute, remove mechanism from case (see paragraph "HOW TO REMOVE MECHANISM FROM CASE"), then remove 3 red painted screws which are used to mount coin chute to case. Remove front plate of chute, mounted with machine screws, and then clean chute with gasoline and a small fine brush. After gasoline has evaporated, replace front plate and screws and mount coin chute back into case.

#### METHOD OF RETURNING MACHINE

When returning machines for repairs or trade in, pack securely, and address to Bell-O-Matic Corporation, 4100 Fullerton Ave., Chicago 39, Illinois. On freight shipments mail at once bill of lading directly to us to expedite handling.

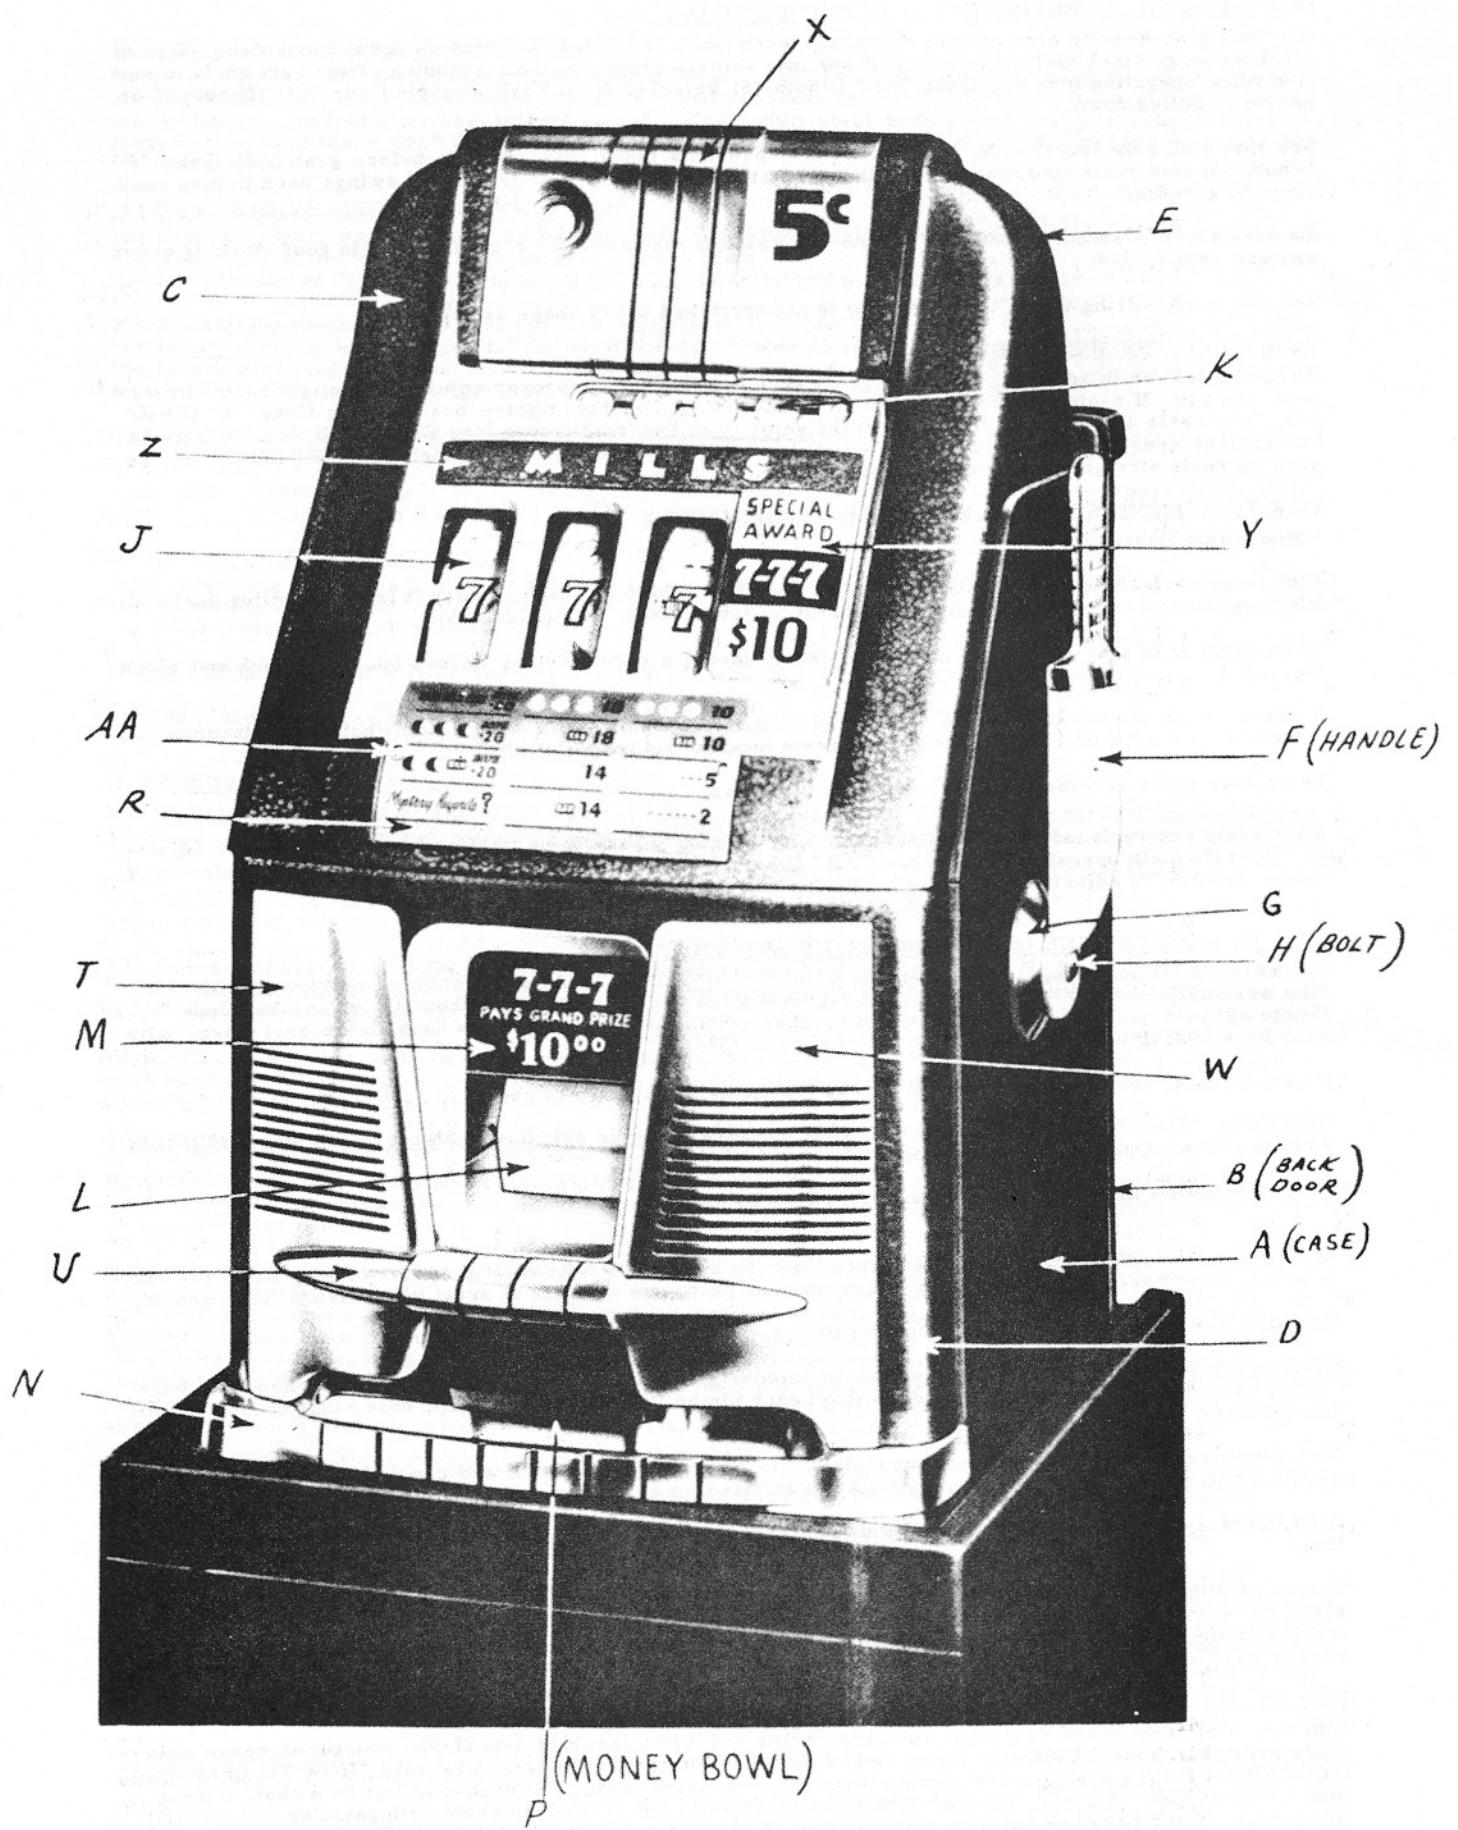


PHOTO #1

## PHOTO #1

## VIEW - CASE, CASTINGS &amp; ORNAMENTS

<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
A	MLB-8458-2-CSP	Cabinet Assembly 5¢, 10¢, 25¢	\$ 14.00
	MLB-8464-2-CSP	Cabinet Assembly 50¢	14.00
B	MLB-7416-2-CSP	Back Door Assembly	7.50
	MLB-636-B	Backdoor Lock Plate	.30
	MLB-1794	Backdoor Nut Shield	.30
	MODEL 280-S	Lock & Key Assembly	3.00
C	MLB-7905-9	Upper Front Casting 5¢, 10¢, 25¢	15.00
	MLB-8000-9	Upper Front Casting 50¢	15.00
D	MLB-8450-8	Lower Front Casting 5¢, 10¢, 25¢	15.00
	MLB-8003-8	Lower Front Casting 50¢	15.00
E	MLB-7710-14-CSP	Top Rear Casting	12.50
F	MLB-7621-7	Handle	6.00
G	MLB-7411	Handle Bushing	1.50
H		3/8-16 X 2 Carriage Bolt (Chrome Pl. Head)	.15
J	MLB-1778	Reel Window Glass	.75
K	MLB-2654	Escalator Glass Support (5¢, 10¢, 25¢)	.30
	MLB-2679	Escalator Glass 5¢, 10¢, 25¢	.75
	MLB-3127-A	Escalator Glass Support 50¢	.30
	MLB-3133-A	Escalator Glass 50¢	.75
L	MLB-2836	Jackpot Glass	1.75
M	MLB-8400-2	5¢ Jackpot Glass Spacer \$10.00	1.75
	MLB-8401-2	10¢ Jackpot Glass Spacer \$20.00	1.75
	MLB-8402-2	25¢ Jackpot Glass Spacer \$50.00	1.75
	MLB-8399-2	50¢ Jackpot Glass Spacer \$100.00	1.75
N	MLB-7904-8	Money Bowl Apron 5¢, 10¢, 25¢	4.00
	MLB-7904-7	Money Bowl Apron 50¢	4.00
P	MLB-9023-CSP	Money Bowl Assembly 5¢, 10¢, 25¢	6.00
	MLB-8409-CSP	Money Bowl Assembly 50¢	6.00
R	MLB-9073	Reward Plate 2/5	2.50
T	MLB-7921-5	Front Ornament - Left	6.00
W	MLB-7920-5	Front Ornament - Right	6.50
U	MLB-7912-5	Front Ornament - Center	4.00
X	MLB-7909-6	5¢ Play Shield	5.00
	MLB-7910-6	10¢ Play Shield	5.00
	MLB-7911-6	25¢ Play Shield	5.00
	MLB-8002-6	50¢ Play Shield	5.00
Y	MLB-9046-5	5¢ Reel Window Ornament \$10.00	2.00
	MLB-9114-5	10¢ Reel Window Ornament \$20.00	2.00
	MLB-9115-5	25¢ Reel Window Ornament \$50.00	2.00
	MLB-8351-5	50¢ Reel Window Ornament \$100.00	2.00
Z	MLB-7840-10	Name Plate	2.50
	MLB-7840-11	Name Plate	2.50
AA	MLB-475	Round Head Screw	.10

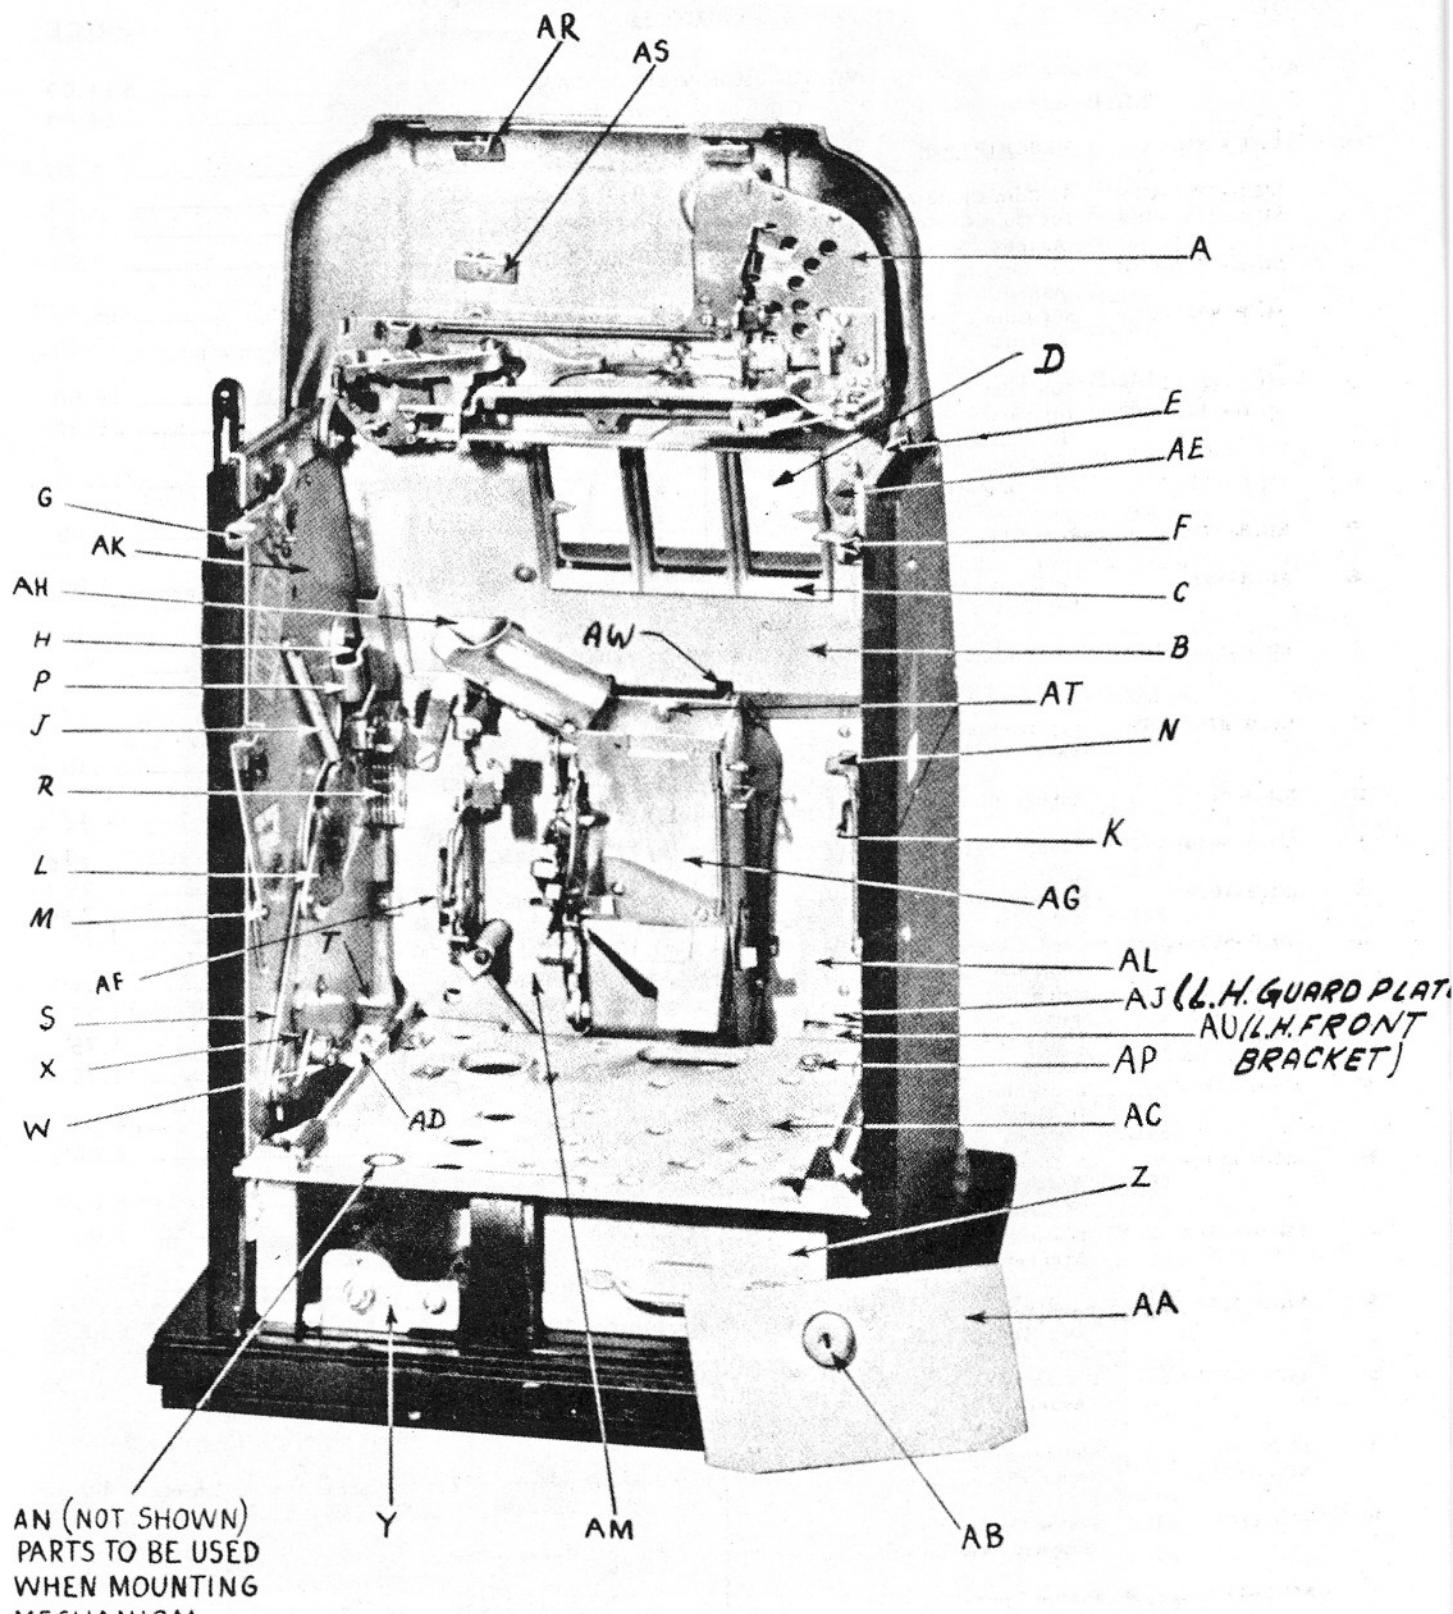


PHOTO. #2

PHOTO #2

VIEW - BACK VIEW OF CASE

<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
A	MLB-7703-CSP	5¢ Coin Chute Assem.	\$ 17.50	Z	MLB-7925-CSP	Cash Box Assembly	\$ 2.50
	MLB-7700-CSP	10¢ Coin Chute Assem.	17.50	AA	MLB-1410-CSP	Cash Box Door Assem. (Without Lock)	2.50
	MLB-7706-CSP	25¢ Coin Chute Assem.	17.50	AB	MOD. 280-S	Lock & Key Assembly	3.00
	MLB-8021-CSP	50¢ Coin Chute Assem.	25.00	AC	MLB-7901-1	Mechanism Base 5¢, 10¢, 25¢	5.00
B	MLB-8455-CSP	Top Guard Plate Assembly	3.00		MLB-1643-B	Mechanism Base 50¢	5.00
	MLB-8433-CSP	Top Guard Plate Assembly 50¢	3.00	AD	PV-944	Washer Per Doz.	.15
C	MLB-2515	Reel Glass Frame	1.25	AE	MLB-2650	Slug Box	.75
D	MLB-1778	Reel Glass	.75	AF		Token Chute Assembly (See Fig. 9)	
E	MLB-6821	Left & Right Cabinet Side Top Guard	.50	AG		Jackpot Assembly (See Fig. 8)	
F	MLB-2763-CSP	Top Locking Lever Assem. (Left)	1.75	AH	MLB-2775-CSP	5¢ Jackpot Loading Chute Assem.	1.00
G	MLB-2762-CSP	Top Locking Lever Assem. (Right)	1.75		MLB-7000-CSP	50¢ Jackpot Loading Chute Assem.	1.00
H	MLB-91	Rubber Bumper	.15	AJ	MLB-6865	L.H. Guard Plate	2.00
J	MLB-6464-A-CSP	Handle Spring Assembly	.50	AK	MLB-6866	R.H. Guard Plate	2.00
K	MLB-1069	Mechanism Clamp Retainer	.20	AL	MLB-7730	L.H. Guard Plate (Front) 5¢, 10¢, 25¢	.75
L	MLB-5936-CSP	Handle Starting Lever Assembly	1.75		MLB-8414-CSP	L.H. Guard Plate (Front) 50¢	1.00
	MLB-9031	Speed Lock	.75	AM	MLB-8453	R.H. Guard Plate (Front) 5¢, 10¢, 25¢	1.25
	MLB-9032	Speed Lock Adjustment	.20		MLB-8413	R.H. Guard Plate (Front) 50¢	.75
	MLB-9033	Cotter Shoulder Pin	.15	AN	PB-35-C	Washer Per Doz. 1/4-20 X 1 Long Thumb Screw	.30
M	MLB-2147-CSP	Mechanism Clamp Assem. (R.H.)	1.25	AP	MLB-713	Clamp	.10
N	MLB-2143-CSP	Mechanism Clamp Assem. (L.H.)	1.25	AR	MLB-9155	Clamp	.10
P	MLB-585-A-CSP	Handle Starting Lever Bracket Assem.	3.25	AS	MLB-6867	Clamp	.15
R	MLB-3238	Handle Starting Lever Dog Ratchet	.30	AT	BD-1109	Felt Washer	.10
S	MLB-2752-CSP	Piston Operating Lever Assem.	.75	AU	MLB-7688	L.H. Front Mtg. Bracket	.30
T	MLB-742	Mechanism Clamp	.25		MLB-9029	R.H. Front Mtg. Bracket	.30
	MLB-808	Taper Pin	.05	AW	MLB-7914-CSP	Jackpot Mounting Bracket 5¢, 10¢, 25¢	.75
W	FOK-3091-CSP	Piston Operating Lever and Support Assembly	1.75		MLB-9000-CSP	Jackpot Mounting Bracket 50¢	1.00
X	MLB-2755-A-CSP	Piston Operating Lever Assembly	1.50				
Y	MLB-2784-A-CSP	Pump Assembly	5.00				
	OWL-230	Leather Washer (For Pump)	.20				

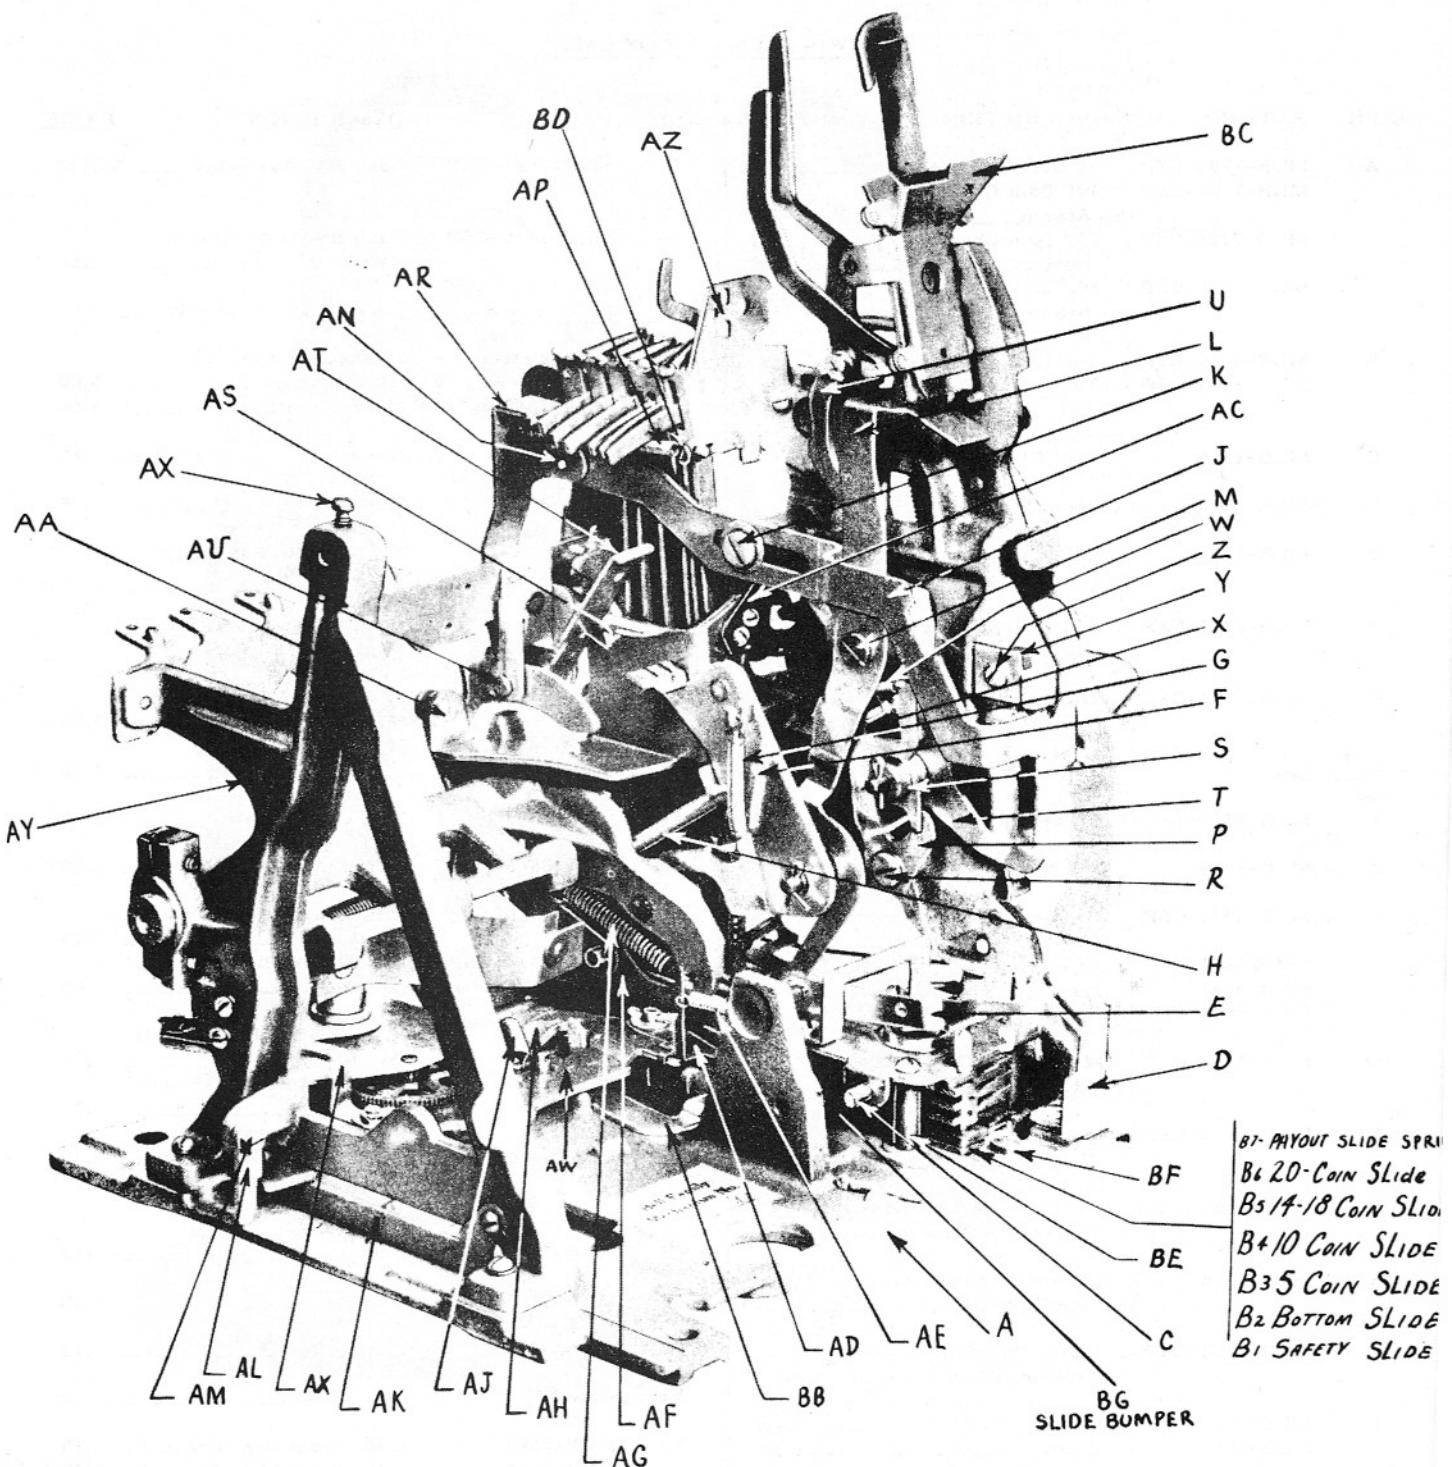


PHOTO #3

## VIEW - LEFT INSIDE MECHANISM

CODE	PART NO.	DESCRIPTION	PRICE	CODE	PART NO.	DESCRIPTION	PRICE
A	MLB-7902-1-CSP	Base & Payout Slide		F	MLB-7640	Shoulder Screw (10¢)	.15
		Posts Assem. 5¢	\$10.00		MLB-8398-CSP	Reel Operating Lever	2.25
	MLB-7902-2-CSP	Base & Payout Slide				Assem.	
		Posts Assem. 10¢	10.00	G	MLB-4060-CSP	Extension Spring & Clip	.15
	MLB-7902-3-CSP	Base & Payout Slide				Assem.	
		Posts Assem. 25¢	10.00	H	MLB-8173-CSP	Extension Spring & Clip	.30
	MLB-3177-B-CSP	Base & Payout Slide				Assem.	
		Posts Assem. 50¢	10.00	J	MLB-3310-A	Award Check Release Push Bar	.50
B-1	MLB-1005	5¢ Safety Slide	1.00	K	MLB-3340-A	Washer - per doz.	.15
	MLB-4282-A	10¢ Safety Slide	1.00		CS-61-A	Shoulder Screw	.15
	MLB-1007	25¢ Safety Slide	1.00	L	MLB-5999-CSP	Check Tube Shutoff Lever Assem. 5¢	1.50
	MLB-968	50¢ Safety Slide	1.00		MLB-2921-B-CSP	Check Tube Shutoff Lever Assem. 10¢	1.50
	MLB-2725	Safety Slide Spring	.15		MLB-2788-CSP	Check Tube Shutoff Lever Assem. 25¢	1.75
B-2	MLB-7610-CSP	5¢ Bottom Slide Assembly 2/5	2.00		MLB-3283-CSP	Check Tube Shutoff Lever Assem. 50¢	1.75
	MLB-7611-CSP	5¢ Bottom Slide Assembly 3/5	2.00	M	MLB-2730	Check Tube Shutoff Lever Shoulder Screw	.15
	MLB-7633-CSP	10¢ Bottom Slide Assembly 2/5	2.00	P	MLB-3149	Check Tube Shutoff Lever	.75
	MLB-7634-CSP	10¢ Bottom Slide Assembly 3/5	2.00	R	MLB-3245	Check Tube Shutoff Lever Shoulder Screw	.15
	MLB-7613-CSP	25¢ Bottom Slide Assembly 2/5	2.00	S	MLB-2790-CSP	Check Tube Shutoff Lever Latch Assem.	.30
	MLB-7614-CSP	25¢ Bottom Slide Assembly 3/5	2.00	T	MLB-4506-CSP	Check Tube Lever Detecting Lever Assem.	1.00
	MLB-7435-CSP	50¢ Bottom Slide Assembly 2/5	2.00	U	MLB-1491	Coin Overflow Push Lever 5¢, 10¢, 25¢	.30
	MLB-7433-CSP	50¢ Bottom Slide Assembly 3/5	2.50		MLB-3134-A	Coin Overflow Push Lever 50¢	1.25
	MLB-7439	Bottom Slide Spring 5¢ - 25¢	2.50		MLB-1135	Washer - per doz.	.15
	MLB-1084	Bottom Slide Spring 10¢	.15	W	MLB-2864	Extension Spring (4506-CSP)	.15
	MLB-3808	Bottom Slide Spring 50¢	.15	X	MLB-2733	Extension Spring (2790-CSP)	.15
B-3	MLB-6830-CSP	5¢ - 5 Coin (Intermediate) Slide 2/5	2.00	Y	MLB-2663	Leather Bumper	.15
	MLB-5267-CSP	5¢ - 5 Coin (Intermediate) Slide 3/5	2.00	Z	MLB-2648	Square Washer (For Leather)	.10
	MLB-6842-B-CSP	10¢ 5 Coin (Intermediate) Slide 2/5	2.00	AA	MLB-6875-CSP	Upper Payout Push Back Lever Assem.	1.75
	MLB-3691-B-CSP	10¢ 5 Coin (Intermediate) Slide 3/5	2.00	AC	MLB-2825-A	Bumper Plate	.15
	MLB-6844-CSP	25¢ 5 Coin (Intermediate) Slide 2/5	2.00	AD	MLB-4984	Payout Slide Safety Lock	.30
	MLB-258-C-CSP	25¢ 5 Coin (Intermediate) Slide 3/5	2.00	AE	MLB-2863	Payout Slide Safety Lock Spring	.15
	MLB-743s-CSP	50¢ 5 Coin (Intermediate) Slide 2/5	2.50				
	MLB-3689-C-CSP	50¢ 5 Coin (Intermediate) Slide 3/5	2.50				
	MLB-3809	Intermediate Slide Spring 5¢ - 25¢	.15				
	MLB-569	Intermediate Slide Spring 10¢	.15				
	MLB-7940	Intermediate Slide Spring 50¢	.15				
B-4	MLB-3392-A-CSP	5¢ - 10 Coin (Heavy Brass) Slide Assem.	2.00				
	MLB-3398-C-CSP	10¢ 10 Coin (Heavy Brass) Slide Assem.	2.00				
	MLB-3395-A-CSP	25¢ 10 Coin (Heavy Brass) Slide Assem.	2.00				
	MLB-3695-CSP	50¢ 10 Coin (Heavy Brass) Slide Assem.	2.50				
	MLB-3809	10 Coin Slide Spring 5¢	.15				
	MLB-570	10 Coin Slide Spring 10¢ - 25¢	.15				
	MLB-7939	10 Coin Slide Spring 50¢	.15				
B-5	MLB-1420-C-CSP	5¢ - 14-18 Coin Slide Assembly	2.00				
	MLB-3690-C-CSP	10¢ 14-18 Coin Slide Assembly	2.00				
	MLB-1430-C-CSP	25¢ 14-18 Coin Slide Assembly	2.00				
	MLB-3696-C-CSP	50¢ 14-18 Coin Slide Assembly	2.50				
	MLB-570	14-18 Payout Slide Spring 5¢, 10¢, 25¢	.15				
	MLB-7939	14-18 Payout Slide Spring 50¢	.15				
B-6	MLB-7474-CSP	5¢ Top Slide Assem.	2.00				
	PT-4569-CSP	5¢ Top Slide Assem.					
	MLB-7514-CSP	Token J.P.	2.00				
	MLB-7803-CSP	10¢ Top Slide Assem.	2.00				
	MLB-7518-CSP	Token J.P.	2.00				
	PT-4839-CSP	25¢ Top Slide Assem.	2.00				
	MLB-3697-B-CSP	50¢ Top Slide Assem.	2.50				
	MLB-8474-CSP	50¢ Top Slide Assem.	2.50				
	MLB-3809	20 Coin Payout Slide Spring 5¢ - 25¢	.15				
	MLB-569	20 Coin Payout Slide Spring 10¢	.15				
	MLB-7940	20 Coin Payout Slide Spring 50¢	.15				
B-7	MLB-3324	Payout Slide Spring (Use on Brass Slides)	.15				
	MLB-4115	Payout Slide Spring (Use on steel Slides)	.15				
C	MLB-6758-A-CSP	5¢ Payout Slide Cover Assem.	2.00				
	MLB-7393-CSP	10¢ Payout Slide Cover Assem.	2.00				
	MLB-6760-CSP	25¢ Payout Slide Cover Assem.	2.00				
	MLB-6934-CSP	50¢ Payout Slide Cover Assem.	3.00				
D	MLB-3439	Payout Slide Stop 5¢-25¢	.35				
	MLB-3318	Payout Slide Stop 10¢	.35				
	MLB-1902-B	Payout Slide Stop 50¢	.35				
E	MLB-7463-CSP	J.P. Trip Lever & Bracket Assem.	1.00				

## RIGHT INSIDE MECHANISM

AF	MLB-4866-CSP	5¢ - 25¢ Payout Slide Push Bar & Oper. Lever Assem.	1.75
	MLB-7635-CSP	10¢ Payout Slide Push Bar & Lever Assem.	1.50
	MLB-4867-CSP	50¢ Payout Slide Push Bar & Oper. Lever Assem.	1.75
AG	MLB-3793	Push Bar Spring 5¢, 25¢, 50¢	.40
	MLB-2737	Push Bar Spring 10¢	.30
AH	MLB-7062-CSP	Payout Slide Stop Lever 5¢, 10¢, 25¢	1.00
	MLB-69-C-CSP	Payout Slide Stop Lever 50¢	1.00
AJ	MLB-160	Extension Spring (7062-CSP)	.15
AK	MLB-444-A	Timing Lever Support	.75
AL	MLB-2144	Timing Lever Lock	.15
AM	DE-25B	Timing Lever Lock Shoulder Screw	.15
AN	MLB-4295	Shoulder Screw (3310-A)	.15
AP	MLB-3341	Extension Spring (3310-A)	.15
AR	MLB-9118	Disc Stop Lever	.75
AS	MLB-6474	Torsion Spring	.15
AT	MLB-6473	Disc Stop Lever Inner	.15
AW	MLB-2765-A-CSP	Reel Timing Lever Assem. 5¢, 10¢, 25¢	2.00
	MLB-3659-A-CSP	Reel Timing Lever Assem. 50¢	2.00
AX	MLB-2843	Reel Timing Lever Connecting Link	.30
AU	MLB-2721	Reel Brake Lever Pin	.15
AX	AGV-80	Shoulder Screw	.10
AY	MLB-2782-CSP	L.H. Side Frame	7.50
AZ	MLB-8337-CSP	Payout Guide & Bracket Assem.	1.85
BB	MLB-1118	Payout Slide Lock 5¢, 10¢, 25¢	.20
	MLB-7462	Payout Slide Lock 50¢	.25
	MLB-1119	Payout Slide Lock Spring	.15
	MLB-674	Payout Slide Lock Shoulder Screw	.15
BC	MLB-7601-CSP	Lower Coin Chute Assembly 5¢, 10¢, 25¢	1.00
	FOK-4173-CSP	Lower Coin Chute Assembly 50¢	1.00
BD	DE-11-C SHORT	Shoulder Screw	.15
DE	MLB-8497-1	Service Post - 5¢	.35
	MLB-8497-2	Service Post 10¢	.35
	MLB-8497-3	Service Post 25¢	.35
	MLB-8497-4	Service Post 50¢	.35
BF	MLB-1146	Payout Slide Stop Stud	.30
BG	MLB-2680-A-CSP	Payout Slide Bumper Assem.	.35

SEE PAGE  
FOR REEL DISCS  
AND REEL STRIPS

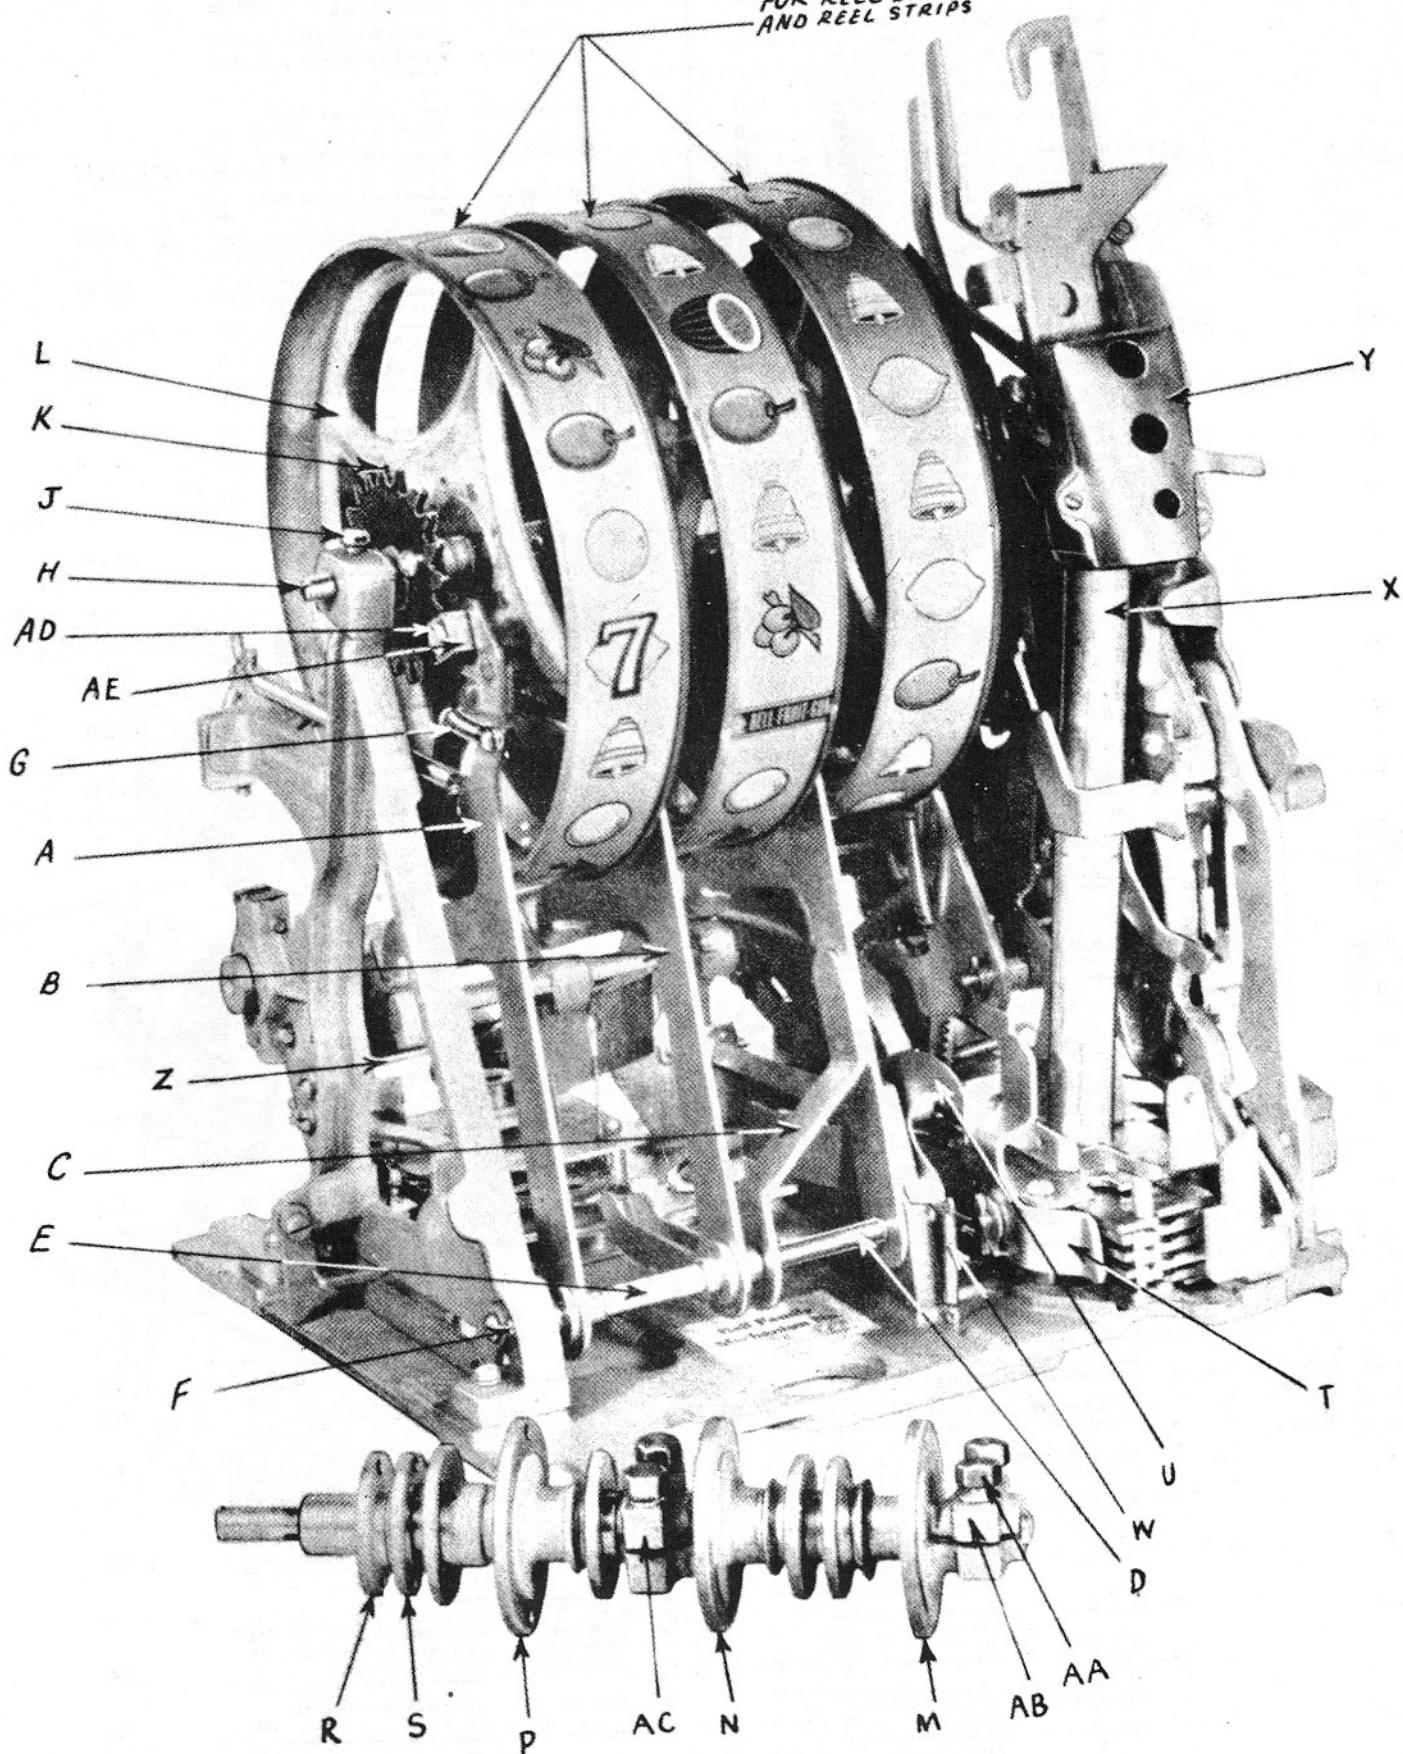


PHOTO-#4

## PHOTO #4

## VIEW - MECHANISM FRONT

<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
A	MLB-5215-B-CSP	1st. Reel Stop Lever Assembly_____	\$ 2.00
B	MLB-7919-CSP	2nd. Reel Stop Lever Assembly_____	2.00
C	MLB-5214-B-CSP	3rd. Reel Stop Lever Assembly_____	2.00
D	MLB-2724-B	Reel Stop Lever Shaft_____	.30
E	STD-734	Reel Stop Lever Spacer_____	.15
F	BDM-662	Clip_____	.15 doz.
G	D-620	Extension Spring_____	.15
H	MLB-7913	Reel Shaft_____	.50
J	AGV-80	Shoulder Screw_____	.10
K	MLB-3329	Reel Stop Star_____	1.00
L	MLB-722-A-CSP	Reel Assembly_____	1.75
M	MLB-2506-A	1st. Reel Hub_____	1.75
N	MLB-2507-A	2nd. Reel Hub_____	1.75
P	MLB-34-B	3rd. Reel Hub_____	1.75
R	MLB-77-C-CSP	1st. Reel Disc Bearing & Hub Assem._____	2.00
S	MLB-76-C-CSP	2nd. Reel Disc Bearing & Hub Assem._____	1.75
T	MLB-2823	Jackpot Push Bar 5¢, 10¢, 25¢_____	1.50
	MLB-3726-A	Jackpot Push Bar 50¢_____	1.50
U	MLB-2773-CSP	Fan Stop Lever Assem._____	1.00
W	MLB-107	Extension Spring_____	.15
X	MLB-2770-A-CSP	Coin Tube Assembly 5¢_____	5.00
	MLB-2910-B-CSP	Coin Tube Assembly 10¢_____	5.00
	MLB-2900-A-CSP	Coin Tube Assembly 25¢_____	7.50
	MLB-3184-A-CSP	Coin Tube Assembly 50¢_____	9.00
Y	MLB-2676	Check Tube Cover 5¢, 10¢, 25¢_____	.30
	MLB-3104	Check Tube Cover 50¢_____	.30
Z	MLB-2750-CSP	Felt Pad & Bracket Assembly_____	1.00
AA	MLB-1379	Hexagon Head Bolt_____	.10
AB	MLB-2435	Service Clamp (1st. Hub)_____	.50
AC	MLB-2436	Service Clamp (2nd. Hub)_____	.50
AD	MLB-5170-A	Shoulder Stud_____	.20
AE	MLB-5171-A	Reel Stop Lever Block_____	.40

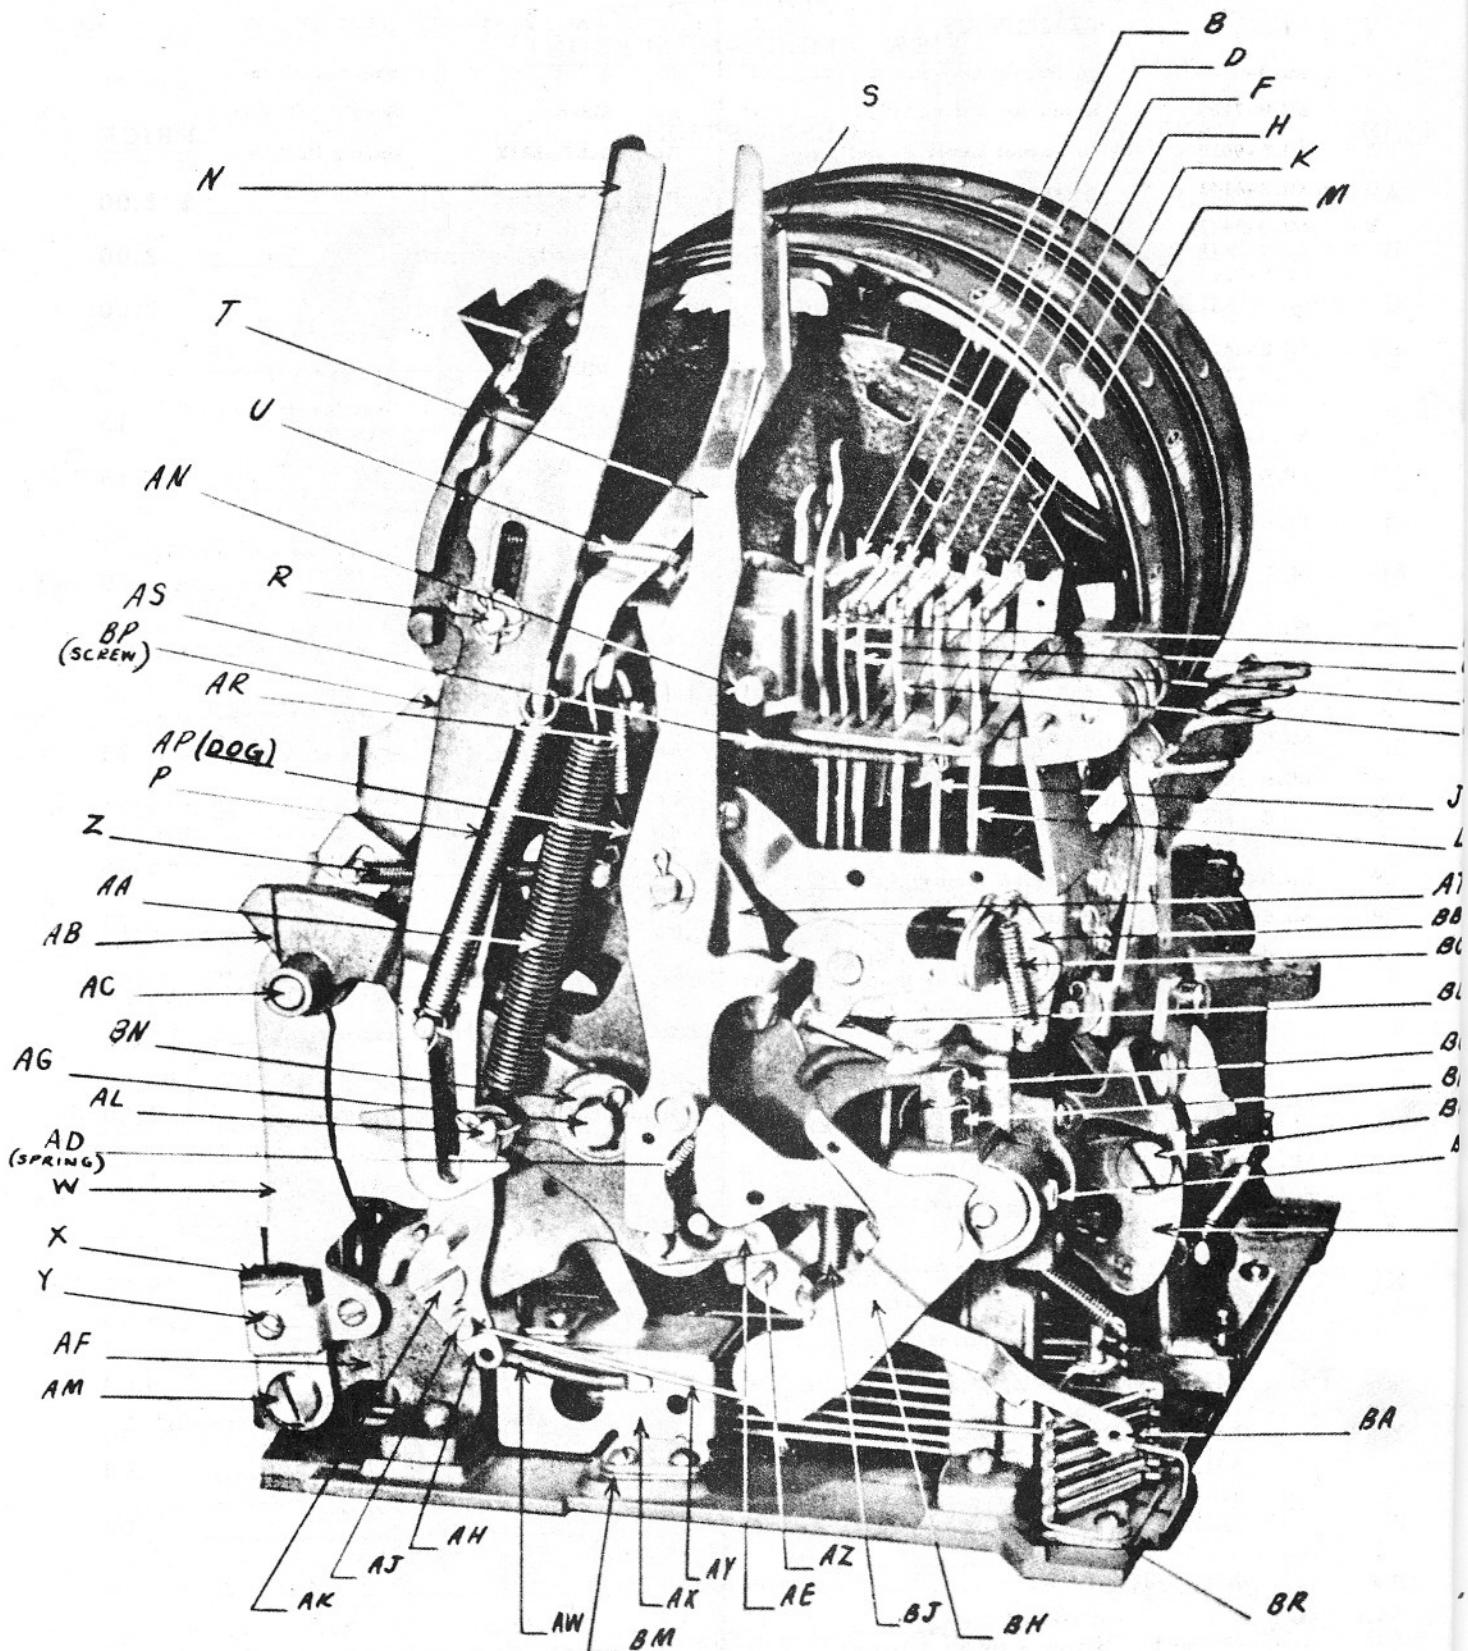


PHOTO #5

## PHOTO #5

## VIEW - R.H. SIDE

CODE	PART NO.	DESCRIPTION	PRICE	CODE	PART NO.	DESCRIPTION	PRICE
A	MLB-580	20 Payout Lever	\$ .75	AJ	PV-728	Shoulder Screw	.15
B	MLB-7469	Extension Spring (20)	.15	AK	CS-60	Shoulder Screw	.15
C	MLB-9080	18 Payout Lever 21 Bell	.75	AL	MLB-2217	Spring Hook Spacer	.10
D	MLB-8142	Extension Spring	.15	AM	MLB-2237	Shoulder Screw	.15
E	MLB-3422	18 Payout Lever 5¢, 50¢	.75	AN	MLB-1798	Shoulder Stud (5¢-10¢)	.15
	MLB-2178	18 Payout Lever 10¢	.75		MAS-121	Shoulder Stud (25¢)	.15
	MLB-7253	18 Payout Lever 25¢	.75	AP	MLB-485-C	Operating Lever Dog	.50
F	MLB-102-A	Extension Spring (18)	.15	AR	JR-597-A	Extension Spring	.15
G	MLB-3421	14 Payout Lever 5¢, 50¢	.75	AS	MLB-1887	Extension Spring	.15
	MLB-2177	14 Payout Lever 10¢	.75	AT	MLB-1985-CSP	Overflow Push-out Lever Assem.	1.50
	MLB-7252	14 Payout Lever 25¢	.75	AW	MLB-2863	Extension Spring	.15
H	MLB-102-A	Extension Spring (14)	.15	AX	MLB-650-B	Lower Payout Lever Guide 5¢	1.00
J	MLB-3420	10 Upper Payout Lever 5¢, 50¢	.75		MLB-3649	Lower Payout Lever Guide 10¢	1.00
	MLB-2176	10 Upper Payout Lever 10¢	.75		MLB-3429	Lower Payout Lever Guide 25¢	1.00
	MLB-7251	10 Upper Payout Lever 25¢	.75	MLB-3610	Lower Payout Lever Guide 50¢	1.00	
K	MLB-104-A	Extension Spring (10)	.15	AY	MLB-1162	Jackpot Loading Wire	.15
L	MLB-3419	2/5 Upper Payout Lever 5¢, 50¢	.75	AZ	DE-94-A	Shoulder Screw	.15
	MLB-2179	2/5 Upper Payout Lever 10¢	.75	BA	MLB-552	Check Tube Loading Arm	.75
	MLB-7250	2/5 Upper Payout Lever 25¢	.75	BB	MLB-1830-B-CSP	Anti-Check Payout Base Assembly	3.00
M	MLB-102-A	Extension Spring (2/5)	.15	BC	MLB-1884	Extension Spring	.15
N	MLB-2624	Coin Adv. Bar Operating Lever	1.50	BD	MLB-2738	Extension Spring	.15
P	MLB-8525-CSP	Extension Spring	.50	BE		3/8-16 X 1 Sq. Hd. Set Scr. Cup Point	.15
R	MLB-3062	Shoulder Stud	.30	BF	MLB-591	Hex Nut	.15
S	MLB-2899-CSP	Coin Detector Operating Lever & Rubber Bumper	1.50	BG	MLB-82	Operating Fork Stop Pin	.75
	MLB-7857	Rubber Bumper	.30	BH	MLB-7426-CSP	Release Lever Assem.	2.00
		S-490 x 7/32 Tubular rivets - per doz.	.15	BJ	MLB-1842	Extension Spring	.15
T	MLB-2761-A-CSP	Check Detector Operating Arm Assem.	2.00	BK	CS-60	Shoulder Screw	.15
U	MLB-2862	Extension Spring	.15	BL	MLB-2751-A-CSP	Payout Slide Push Bar Operating Lever 5¢, 25¢	.30
W	MLB-3454-A-CSP	Operating Lever Lock Assem.	1.75		MLB-3694-A-CSP	Payout Slide Push Bar Operating Lever 10¢	.30
X	MLD-2621	Rubber Bumper	.15		MLB-4174-A-CSP	Payout Slide Push Bar Operating Lever 50¢	.35
Y	MLB-2601	Rubber Bumper Retainer	.30		MLB-2605	Payout Slide Push Bar Link	.30
Z	MLB-3442-A	Extension Spring	.15		MLB-2754-CSP	Payout Slide Push Bar Assem. & Pin	.30
AA	MLB-2896-A-CSP	Extension Spring & Hook Assem.	.60				
	MLB-510	Spring Hook Screw	.15	BM	MLB-3417	Payout Lever Guide Shim 5¢	.30
	MLB-511	Spring Hook	.10		MLB-7392	Payout Lever Guide Shim 10¢	.30
AB	FOK-3297-A-CSP	Main Operating Lever & Pin Assem.	5.00		MLB-7457	Guide Shim 10¢	.30
AC	MLB-3814	Shoulder Stud	.15		MLB-4147	Payout Lever Guide Shim 25¢ & 50¢	.30
	MLB-3813	Stud Roller	.30				
AD	MLB-2738	Extension Spring	.15	BN	OWL-118-A	Tin Washer - per doz.	.30
	DE-11-C-Short	Spring Shoulder Screw	.15	BP	MLB-367-A	Shoulder Screw	.15
AE	MLB-2805	Operating Fork Dog	.60	BR	MLB-3418-A	Payout Lever Bracket Shim (Lower) 5¢-25¢	.30
AF	MLB-9122-CSP	R.H. Side Frame Assem.	10.00		MLB-7608	Payout Lever Bracket Shim (Lower) 10¢	.30
AG	MLB-80	Shoulder Stud	.30				
AH	MLB-2759-CSP	Operating Lever Stop & Pin Assem.	.75				

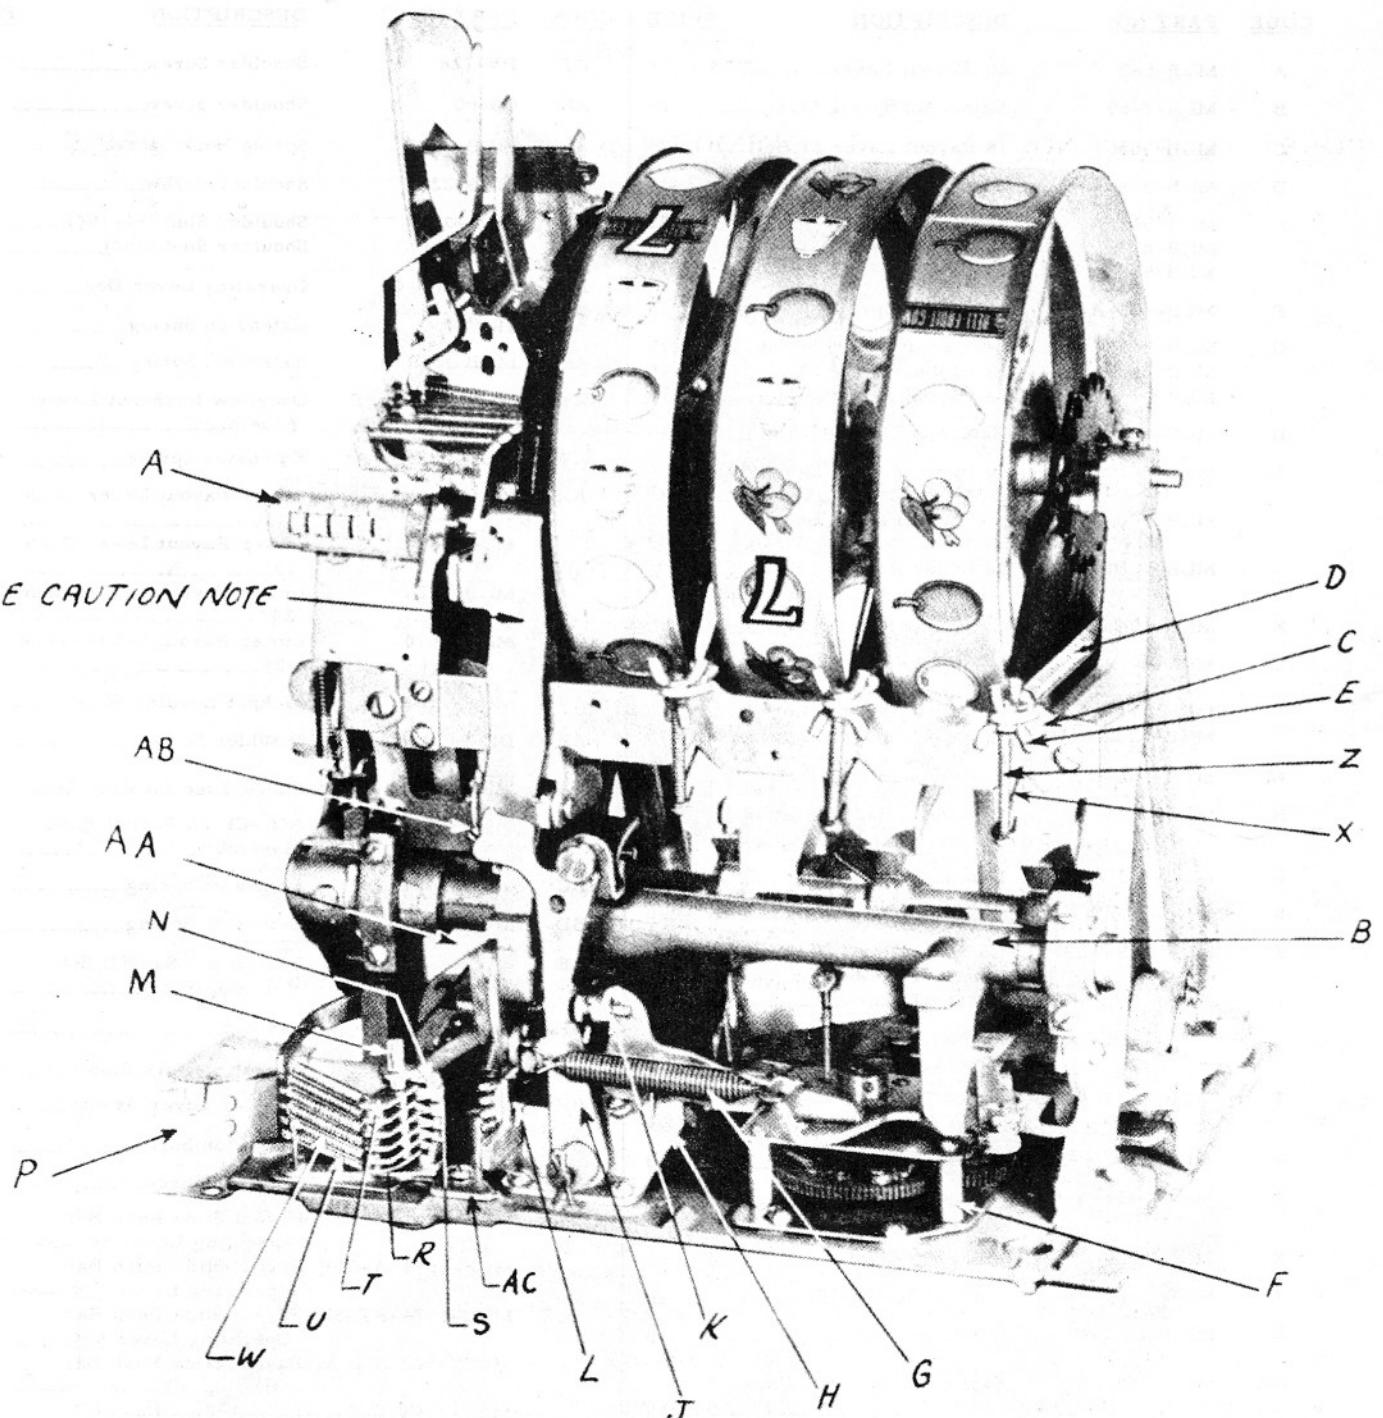


PHOTO #6

PHOTO #6

VIEW - BACK

<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
A	MLB-8135-CSP	Counter Assem.	\$ 5.50
B	MLB-4231-A-CSP	Operating Fork Assem.	8.00
C	MLB-9120-CSP	Disc Stop Lever Assem.	3.50
D	STD-850	Reel Stop Lever Ext. Spring	.30
E	MLB-290	Wing Nut	.10
F	MLB-7662-CSP	Clock Assembly - Complete - See Fig. #9	8.50
G	MLB-2860-B	Clock Spring (5¢-10¢-25¢)	.30
	MLB-5904	Clock Spring (50¢)	.30
H	MLB-7658-CSP	Timing Lever Bracket & Stud Assem.	1.00
J	MLB-7659-CSP	Timing Lever & Hub Assem.	1.50
K	MLB-7657	Timing Lever Adj. Screw & 8-32 Hex Nut	.20
L	MLB-7649	Payout Guide Slide Push Bar Guide	.25
M	MLB-7880	Lower Payout Lever Fulcrum	.30
N	MLB-8501-CSP	Payout Lever Brkt. Lower (5¢-25¢)	1.00
	MLB-8502-CSP	Payout Lever Brkt. Lower (10¢)	1.00
P	MLB-3758-CSP	Lower Payout Lever Guard Assembly	.30
R	MLB-7882	Payout Lever Bottom 5¢-25¢-50¢	.30
	MLB-7886	Payout Lever Bottom 10¢	.30
S	MLB-7881	Payout Lever Lower 5¢-25¢-50¢	.30
	MLB-7885	Payout Lever Lower 10¢	.30
T	MLB-7884	Jackpot Payout Slide Lever - Lower 5¢-25¢	.30
	MLB-7888	Jackpot Payout Slide Lever - Lower 10¢	.30
	MLB-7889	Jackpot Payout Slide Lever - Lower 50¢	.30
	MLB-2129	Extension Spring (Upper Lever)	.15
U	MLB-107	Extension Spring (5 Upper)	.15
W	MLB-6146	Extension Spring (1 Bottom)	.15
X	MLB-155	Reel Brake Wire	.15
Z		8-32 x 1 3/4 Round Head Machine Screw	.20 per doz.
AA	MLB-9079	Payout Lever Bracket (Lower)	1.75
	MLB-53-A	Payout Lever Fulcrum (Upper)	.30
AB	MLB-57-A	Upper Payout Push Back Lever Pin	.30
AC	MLB-3009-CSP	Non Beating Slide Lever Assem.	1.50
	MLB-1079	Extension Spring	.15

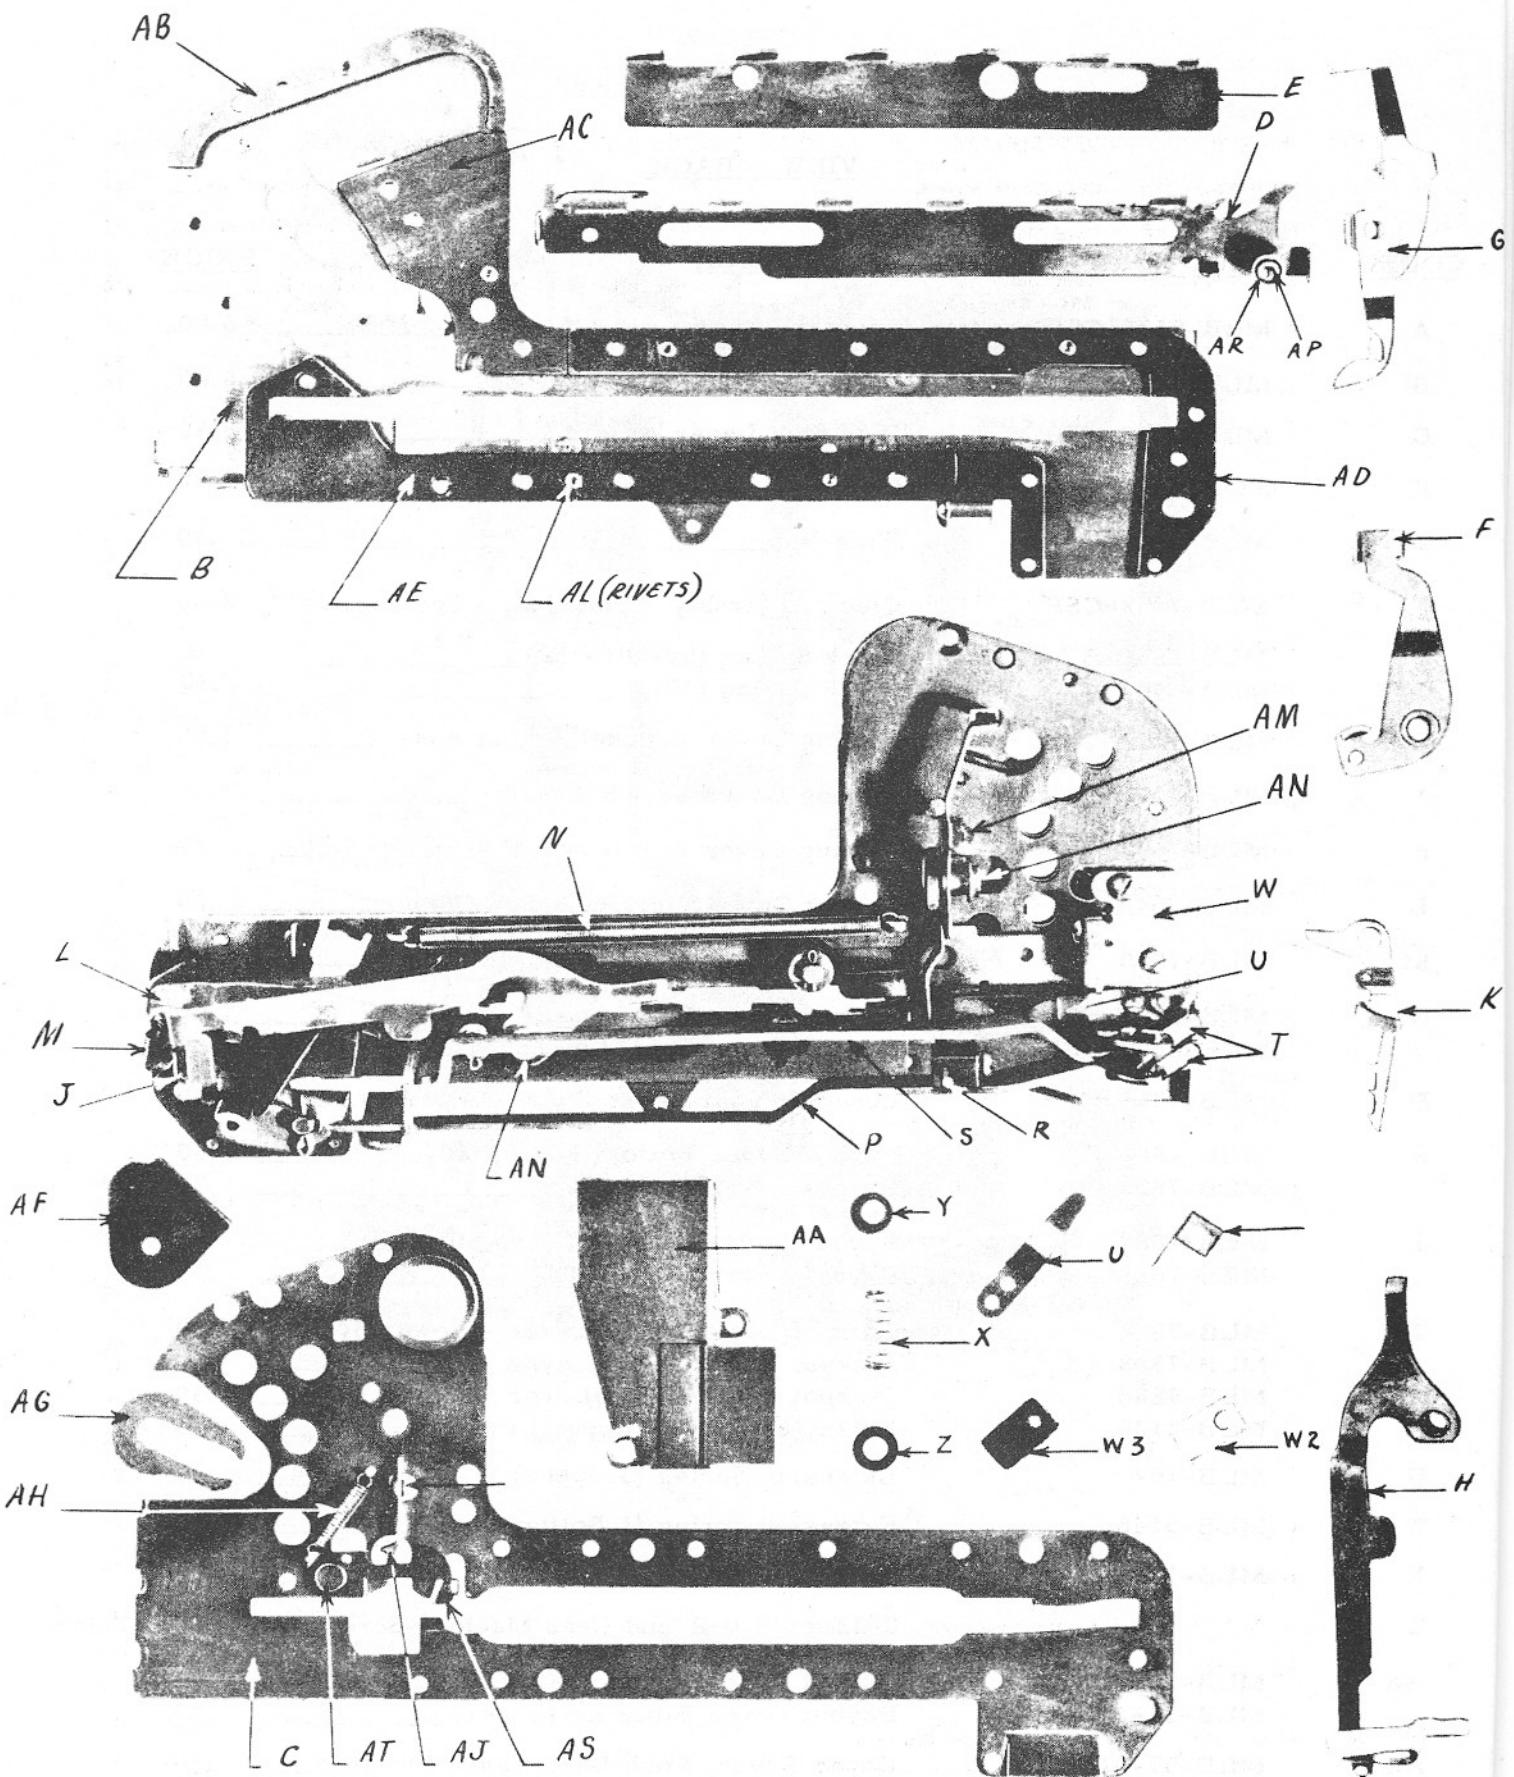


PHOTO #7

PHOTO #7VIEW - COIN CHUTE ASSEMBLY

<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
A	MLB-7703-CSP	Coin Chute Assem. 5¢ - Complete_____	\$17.50	W-1	MLB-2655	Leather Bumper Clamp_____	.15
	MLB-7700-CSP	Coin Chute Assem. 10¢ - Complete_____	17.50	W-2	MLB-3449	Leather Bumper Shim_____ per doz.	.15
	MLB-7706-CSP	Coin Chute Assem. 25¢ - Complete_____	17.50	W-3	MLB-2661-A	Leather Bumper_____	.10
	MLB-8021-CSP	Coin Chute Assem. 50¢ - Complete_____	25.00	X	MLB-2735-A	Coil Spring_____	.15
B	MLB-2699-A-CSP	Coin Chute Back Plate & Spacer Assem. 5¢_____	7.50	Y	MLB-3723 HSC-99	Washer (Small) per doz._____ Washer (Large) per doz.____	.15 .15
	MLB-2915-A-CSP	Coin Chute Back Plate & Spacer Assembly 10¢_____	8.00	Z	MLB-3423	Washer (Bottom - Thick)_____ per doz.	.20
	MLB-2906-B-CSP	Coin Chute Back Plate & Spacer Assembly 25¢_____	8.00	AA	MLB-8341-CSP MLB-8342-CSP	Slug Chute Cover Assem. 5¢-10¢-25¢_____	1.00
	MLB-8020-CSP	Coin Chute Back Plate & Spacer Assembly 50¢_____	8.00			Slug Chute Cover Assem. 50¢_____	1.00
C	MLB-7702-CSP	Coin Chute Front Plate Assembly 5¢_____	3.00	AB	MLB-2641 MLB-2956-A MLB-8015	Coin Chute Top Spacer 5¢-25¢_____	.50
	MLB-7699-CSP	Coin Chute Front Plate Assembly 10¢_____	3.00			Coin Chute Top Spacer 10¢_____	.50
	MLB-7705-CSP	Coin Chute Front Plate Assembly 25¢_____	3.00	AC	MLB-2642 MLB-2957-A MLB-2834 MLB-8017	Coin Chute Middle Spacer 5¢_____	.50
	MLB-9020-CSP	Coin Chute Front Plate Assembly 50¢_____	3.00			Coin Chute Middle Spacer 10¢_____	.50
D	MLB-3094-D-CSP	Coin Adv. Bar Assembly 5¢_____	1.75			Coin Chute Middle Spacer 25¢_____	.50
	MLB-2916-F-CSP	Coin Adv. Bar Assembly 10¢_____	1.75			Coin Chute Middle Spacer 50¢_____	.50
	MLB-2764-E-CSP	Coin Adv. Bar Assembly 25¢_____	1.75	AD	MLB-2643 MLB-2958-A MLB-2831 MLB-8016	Coin Chute End Spacer 5¢_____	.50
	MLB-3153-C-CSP	Coin Adv. Bar Assembly 50¢_____	2.00			Coin Chute End Spacer 10¢_____	.50
E	MLB-3064-B	Coin Holding Bar 5¢_____	1.00			Coin Chute End Spacer 25¢_____	.50
	MLB-2955-B	Coin Holding Bar 10¢_____	1.00			Coin Chute End Spacer 50¢_____	.50
	MLB-2631-B	Coin Holding Bar 25¢_____	1.00	AE	MLB-2644 MLB-2959-B MLB-2835-A MLB-4989	Coin Chute Bottom Spacer 5¢_____	.50
	MLB-3118-A	Coin Holding Bar 50¢_____	1.25			Coin Chute Bottom Spacer 10¢_____	.50
F	MLB-2696-B-CSP	Coin Adv. Bar Lever Assembly_____	.75			Coin Chute Bottom Spacer 25¢_____	.50
G	MLB-2758-A-CSP	Coin Holding Lever Assembly (5¢ - 25¢)_____	.75			Coin Chute Bottom Spacer 50¢_____	.50
	MLB-2917-A-CSP	Coin Holding Lever Assembly (10¢)_____	.75	AF	MLB-2651 MLB-7399 MLB-3128	Coin Chute Bottom Spacer Extension _____ 50¢_____	.25
	MLB-3171-CSP	Coin Holding Lever Assembly (50¢)_____	.75			Magnet Cover 5¢ - 10¢_____	.15
H	MLB-2799-CSP	Coin Bar Release Lever Assembly_____	1.50			Magnet Cover 25¢_____	.15
J	MLB-2731	Extension Spring_____	.15	AG	JR-614 MLB-7398	Magnet Cover 50¢_____	.15
K	MLB-4283	Coin Adv. Bar Locking Lever_____	.30	AH	MLB-2731	Magnet 5¢-10¢-50¢_____	.50
L	MLB-674	Shoulder Screw_____	.15	AJ	MLB-6234	Magnet 25¢_____	.50
M	MLB-2854	Extension Spring_____	.15	AK	MSG-190	Extension Spring_____	.15
N	MLB-2728	Extension Spring_____	.15	AL		Anti-Jam Lever 5¢-10¢-25¢	.25
P	MLB-2683-CSP	Coin Detector Lever Assembly_____	1.50	AM	MLB-2873	Shoulder Screw_____	.05
R	MLB-2878	Check Detector Pin (5¢- 25¢)_____	.15	AN	MLB-2875	S-490 x 1/4 Tubular Rivets 5¢-25¢ - per doz._____	.15
	MLB-2964	Check Detector Pin (10¢)_____	.15	AP	STD-533	S-490-X 9/32 Tubular Rivets 50¢ - per doz._____	.15
S	MLB-2634	Check Detector Lever_____	1.00	AR	STD-534	S-490 x 7/32 Tubular Rivets 10¢ - per doz._____	.15
T	MLB-2732	Extension Spring_____	.15	AS	FOK-3400-A	Extension Spring_____	.15
U	MLB-2997	Coin Advancing Bar Clip_____	.15		MLB-7876	Shoulder Screw_____	.15
W	MLB-7404	Bracket_____	.30			Shoulder Rivet_____	.10
						Roller_____	.30
						Coin Advancing Holding Lever 5¢-10¢-25¢_____	.50
						Coin Advancing Holding Lever 50¢_____	.50
				AT	FOK-3401	Shoulder Rivet_____	.15

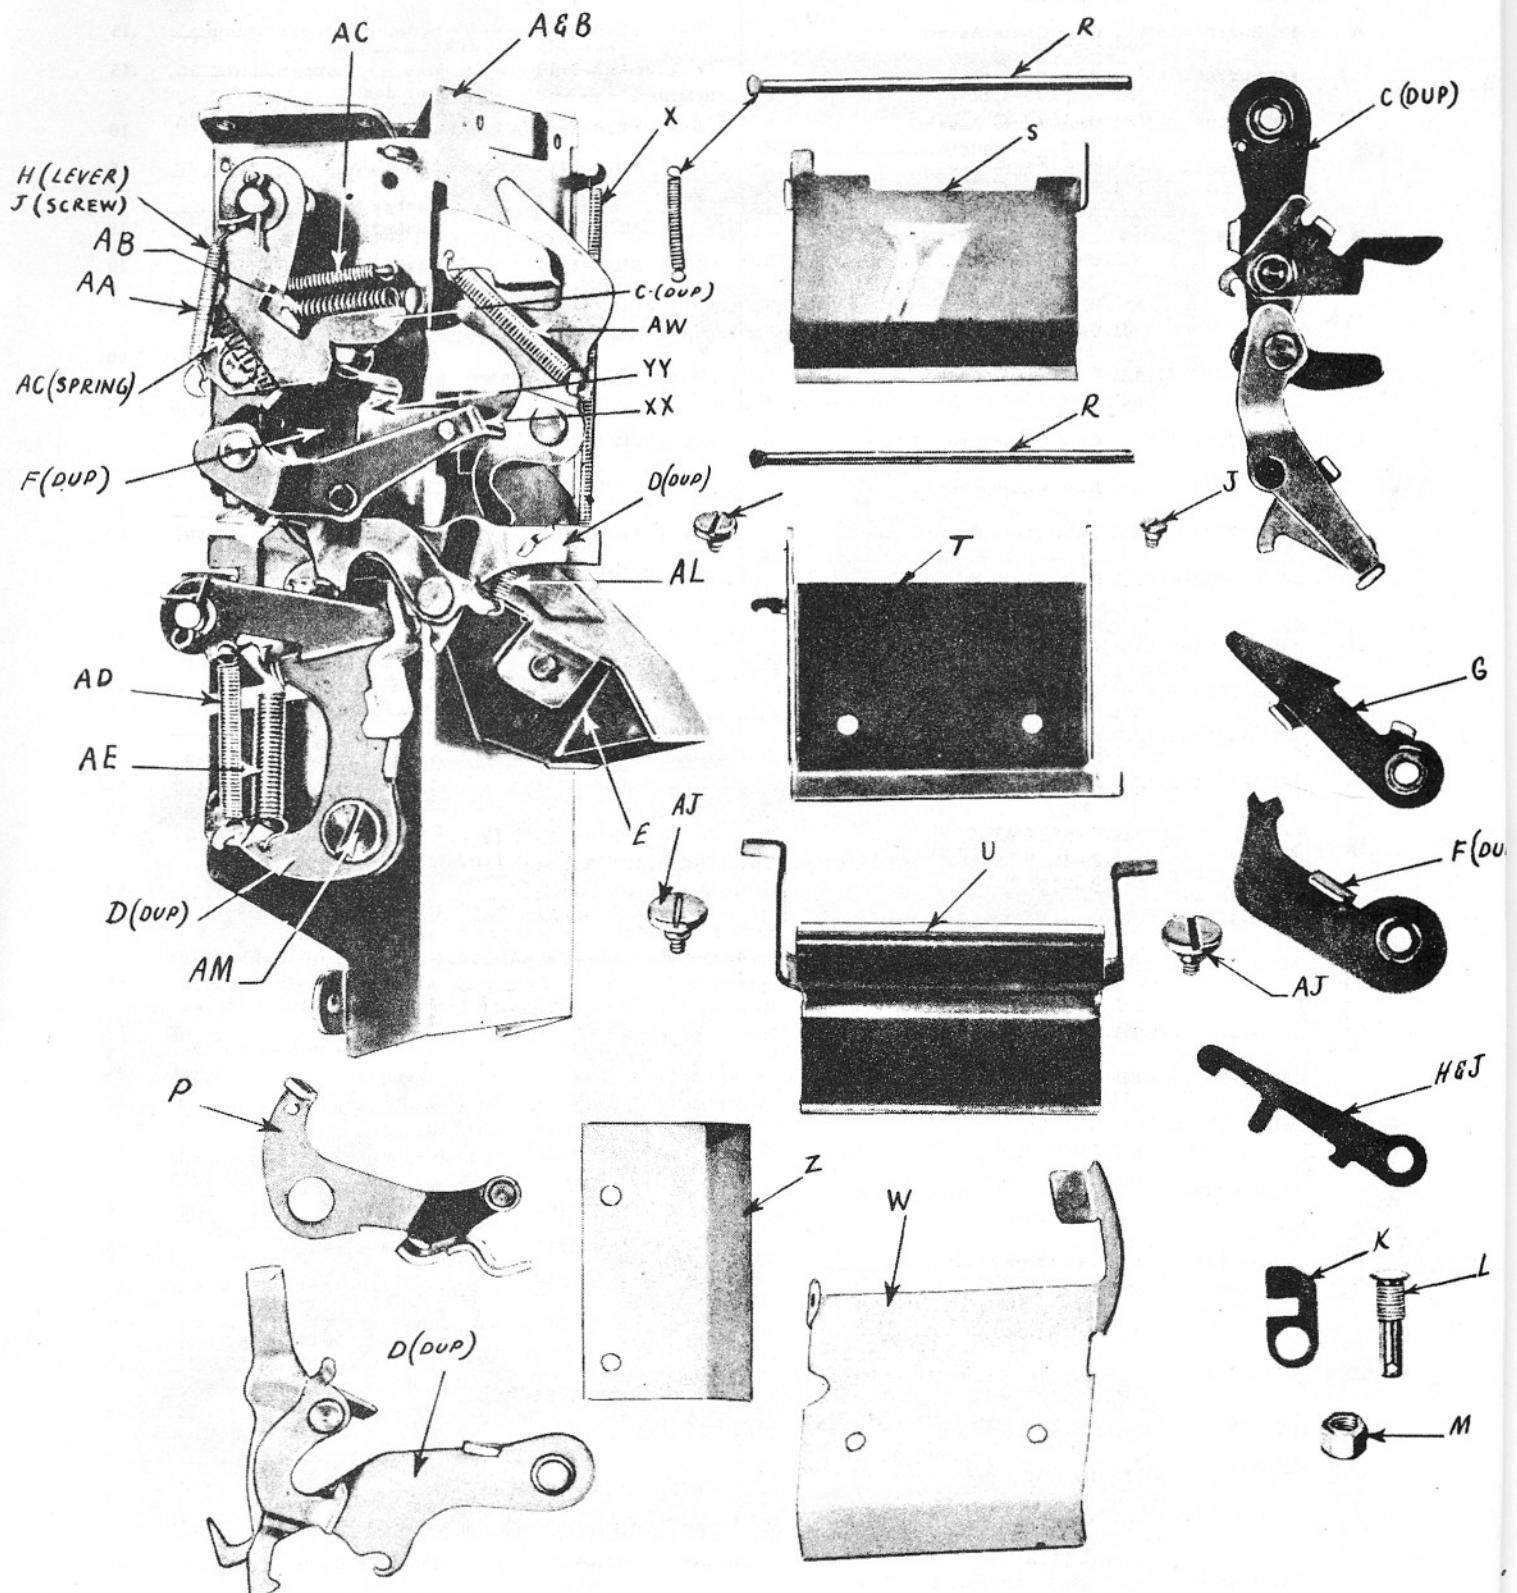


PHOTO-#8

PHOTO #8

## VIEW - JACKPOT ASSEMBLY

<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
A	MLB-7505-CSP MLB-7504-CSP MLB-7505-CSP MLB-3677-C-CSP	5¢ Jackpot Assembly - Large 10¢ Jackpot Assembly - Large 25¢ Jackpot Assembly - Large 50¢ Jackpot Assembly - Large	\$17.50 17.50 17.50 25.00
B	MLB-2771-B-CSP MLB-3252-CSP MLB-3164-B-CSP	Jackpot Mechanism Base Assem. 5¢ - 25¢ Jackpot Mechanism Base Assem. 10¢ Jackpot Mechanism Base Assem. 50¢	5.00 5.00 5.00
C	MLB-2791-B-CSP	Reserve Operating Lever Assembly	1.50
D	MLB-2792-A-CSP MLB-3173-A-CSP	Safety Locking Lever Assem. 5¢-10¢-25¢ Safety Locking Lever Assem. 50¢	1.50 1.50
E	MLB-2796-CSP MLB-3166-A-CSP	Jackpot Back Chute Assem. 5¢-10¢-25¢ Jackpot Back Chute Assem. 50¢	1.00 1.00
F	MLB-2397-CSP	Reserve Retainer Locking Lever Assem.	.75
G	MLB-7458-CSP	Jackpot Locking Lever Assem.	.75
H	MLB-3631	Reserve Retainer Locking Latch (See J)	.30
J	MLB-3722	Shoulder Screw (For H)	.15
K	MLB-3070	Hole Cover 5¢-10¢-25¢	.15
L	MLB-3073	Stud	.30
M	MLB-3074	Stud Nut	.10
P	MLB-3010-B-CSP	Jackpot Dump Lever Assembly	1.00
R	MLB-2746-A	Door Shaft	.20
S	MLB-5524-CSP MLB-2919-CSP MLB-3109-A	Coin Deflector Assem. (5¢-25¢) Coin Deflector Assem. (10¢) Coin Deflector (50¢)	1.00 .75 1.50
T	MLB-3039-B MLB-4470-CSP MLB-3251-CSP MLB-4724-CSP MLB-4064-CSP	Reserve Retainer (Large) 5¢-25¢ Reserve Retainer (Small) 5¢ Reserve Retainer 10¢ Reserve Retainer (Small) 25¢ Reserve Retainer 50¢	1.00 1.50 1.00 1.50 1.50
U	MLB-3046 MLB-3043 MLB-3099 MLB-2821 MLB-3108-A	Jackpot Trap Door 5¢-25¢ (Large) Jackpot Trap Door 5¢-25¢ (Small) Jackpot Trap Door 10¢ (Small) Jackpot Trap Door 10¢ (Large) Jackpot Trap Door 50¢	1.50 1.50 1.50 1.50 1.50
W	MLB-3045	Jackpot Trap Door	1.00
X	MLB-7506 MLB-3145	Extension Spring 5¢-10¢-25¢ Extension Spring 50¢	.15 .15
Y	MLB-107 MLB-2725	Extension Spring (T to R)5¢-10¢-25¢ Extension Spring (T to R) 50¢	.15 .15
Z	MLB-7424	Guard Plate (5¢-10¢-25¢)	.25
AA	MLB-1511	Extension Spring	.15
AB	MLB-1842	Extension Spring	.15
AC	MLB-2738	Extension Spring	.15
AD	MLB-3144	Extension Spring	.15
AE	MLB-1842	Extension Spring	.15
AH	MLB-3057-A	Shoulder Screw	.15
AJ	MLB-2881	Shoulder Screw	.15
AL	STD-53	Extension Spring	.15
AM	MLB-1593-B	Shoulder Screw	.15
AW	MLB-2871	Extension Spring	.15

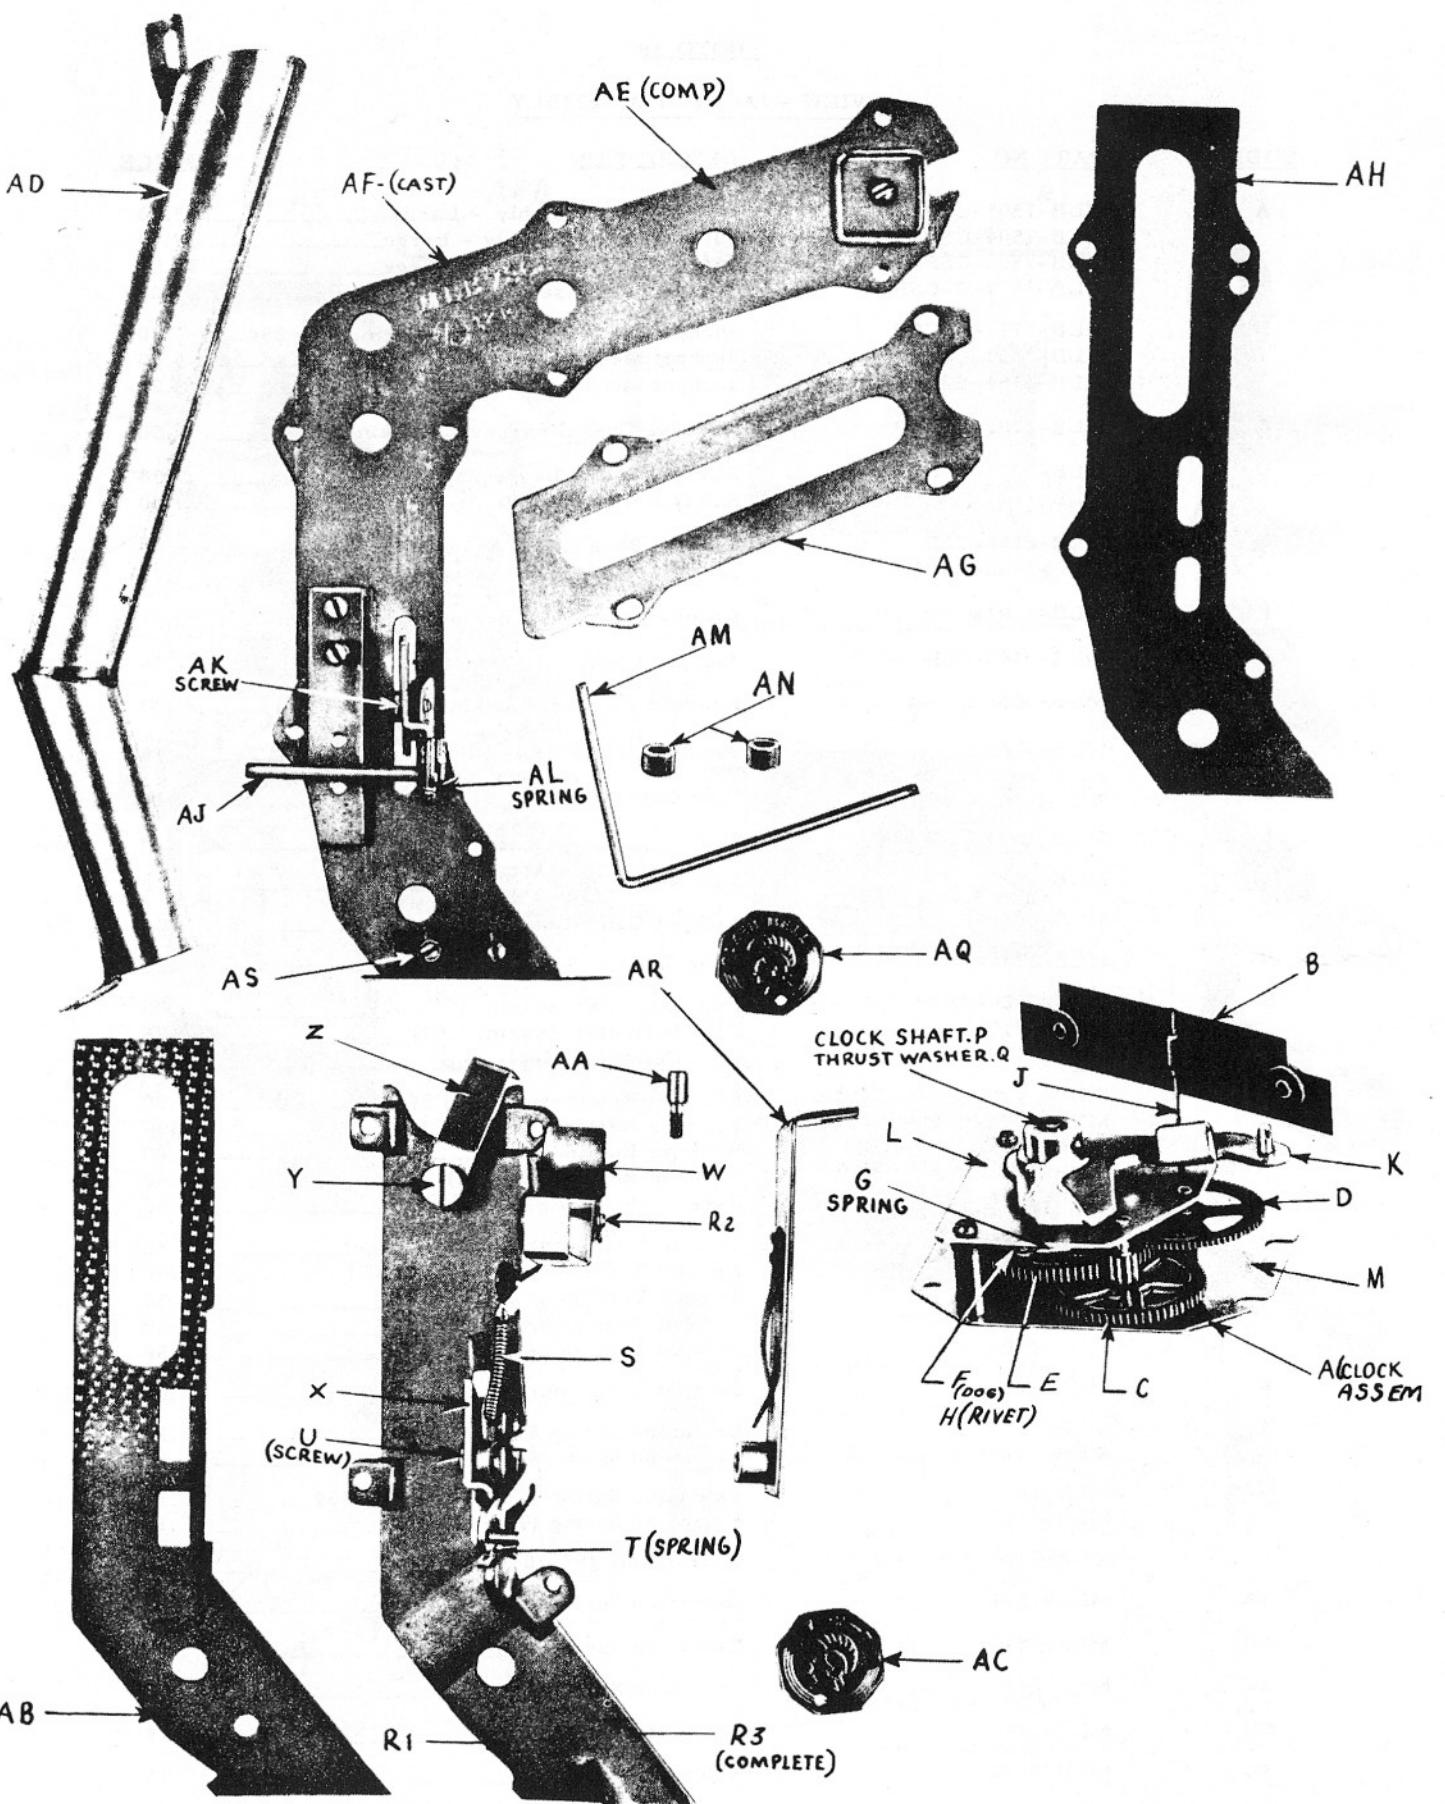


PHOTO # 9

PHOTO #9

VIEW - CLOCK & CHUTES DETAILS

<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>	<u>CODE</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
A	MLB-7565-CSP	Clock Assembly (With Roller on Arm)	\$ 8.50	W	MLB-4061-CSP	Award Check Rel. Arm & Ext. Assem.	.75
	MLB-7662-CSP	Clock Assembly (Without Roller on Arm)	8.50	X	MLB-7732-CSP	Award Check Rel. Finger Assem.	.50
B	MLB-3299-CSP	Clock Fan	.30	Y	CS-62	Shoulder Screw	.15
C	MLB-7574-CSP	Clock Idler Gear Assembly	2.00	Z	MLB-3333	Award Check Stop	.20
D	MLB-1298-CSP	Clock Fan Gear Assem.	2.00	AA	BD-6084	Award Check Stop Stud	.15
E	MLB-7593-CSP	Large Clock Gear Assem. (Includes E.F.G.)		AB	MLB-9048	Token Chute Spacer	.75
	MLB-7580-CSP	Large Clock Gear Assem.	3.00	AC	MLB-8144-2	5¢ Token 7-7-7 Copper	.30
					MLB-8144-3	10¢ Token 7-7-7 Chrome	.30
					MLB-8144-4	25¢ Token 7-7-7 Brass	.30
					MLB-8144-5	50¢ Token 7-7-7 Black	.50
F	MLB-745-A	Clock Ratchet Pawl	.30	AD	MLB-8429-1-CSP	Coin Overflow Tube Assem. 5¢-10¢-25¢	2.50
G	MLB-782-B	Clock Dog Spring	.10		MLB-8445-1-CSP	Coin Overflow Tube Assem. 50¢	3.00
H	MLB-7585	Shoulder Rivet	.10	AE	MLB-7873-CSP	Award Chute Assem. Comp. (Also Order Code AR)	6.50
J	DE-212-CSP	Clock Fan Shaft Assem.	.75	AF	MLB-7868-1	Award Chute Casting	3.50
K	MLB-3011-A-CSP	Clock Arm Assem. (With Roller on Arm)	1.00	AG	MLB-7869	Chute Spacer - Upper	.50
	MLB-7661-CSP	Clock Arm Assem. (Without Roller on Arm)	1.00	AH	PT-5129	Chute Spacer - Lower	.75
L	MLB-7564-CSP	Top - Clock Plate Assem.	1.00	AJ	MLB-8170-CSP	Token Ejector Assembly	.75
M	MLB-7563-CSP	Bottom - Clock Plate Assembly	1.50	AK	MLB-674	Shoulder Screw	.15
P	MLB-7584-CSP	Clock Ratchet & Shaft Assem.	2.00	AL	MLB-3317	Extension Spring	.15
Q	MLB-5419	Spacer Washer	.10	AM	MLB-7871	Bracket	.30
R-1	MLB-9028-1	Award Check Chute	1.75	AN	MLB-7858	Spacer (25¢)	.20
R-2	MLB-984	Cotter Shoulder Pin	.10	AQ	MLB-8143-2	Token Bell - 5¢ Copper	.30
R-3	MLB-9024-CSP	NOTE: When ordering 4 Token Chute Complete, Order - 1 MLB-9024-CSP with Code letter Y,2,AA & AB	4.00		MLB-8143-3	Token Bell 10¢ Chrome	.30
					MLB-8143-4	Token Bell 25¢ Brass	.30
					MLB-8143-5	Token Bell 50¢ Black	.40
S	MLB-3379	Extension Spring (Long)	.15	AR	MLB-7872-CSP	Chute Support Assembly	1.25
T	MLB-3317	Extension Spring (Short)	.15	AS	MLB-7806	Token Chute Guard	.30
U	MLB-674	#8-32 Shoulder Screw	.15				

1ST. REEL DISCS & STRIPS 2/5 PAYOUT

<u>DISC CODE</u>	<u>DISC PART NO.</u>	<u>REEL STRIP FORM NO.</u>	<u>COLOR BACKGROUND OF REEL STRIPS</u>	<u>REMARKS</u>
CH-1	MLB-8505-1	CC-1-1 CC-1-1A CC-10-1 CC-10-1B CC-16-1 CC-16-1B CC-537-1 CC-540	Gold Gold Gold Gold Black Black Silver Silver	Disc must be reworked Melon Melon - Disc must be reworked  Disc must be reworked Disc must be reworked
CH-1C	MLB-8505-2	CC-3 CC-10-1A CC-16-1A CC-539	Gold Gold Black Silver	Melon
CH-1W	MLB-8505-3	CC-19-1	Silver	Wild 2 on Bell
W-1	MLB-8505-4	CC-19-3	Silver	Wild 2 on Bell
BOC-1	MLB-8511-1	CC-11-1	Silver	Bonus
BOC-1A	MLB-8511-2	CC-11-1A CC-11-1B	Silver Silver	Bonus Bonus Wording omitted
EJ-1	MLB-9001	CC-17-1	Silver	Numerical 7 on Lemon
EJ-1A	MLB-9001-2	CC-17-1A	Silver	Numerical 7 on Lemon
EJ-1-B	MLB-9001-3	CC-17-1B	Silver	Numerical 7 on Lemon

2ND REEL DISCS & STRIPS 2/5 PAYOUT

CH-2A	MLB-8506-1	CC-1-2 CC-10-2 CC-16-2 CC-537-2	Gold Gold Black Silver	Melon
CH-2AS	MLB-8506-2	CC-9-2 CC-10-2A CC-12-2 CC-16-2A	Silver Gold Gold Black	Melon
CH-2AC	MIB-8506-3	CC-6-2 CC-7-2	Gold Silver	
BOC-2	MLB-8512-1	CC-11-2	Silver	Bonus
EJ-2	MLB-9002-1	CC-17-2	Silver	Numerical 7 on Orange

3RD. REEL DISCS & STRIPS 2/5 PAYOUT

CH-3A	MLB-8507-1	CC-1-3 CC-10-3 CC-16-3 CC-537-3	Gold Gold Black Silver	Melon
CH-3AS	MLB-8507-2	CC-9-3 CC-10-3A CC-12-3 CC-16-3A	Silver Gold Gold Black	Melon
BOC-3	MLB-8513-1	CC-11-3	Silver	Bonus
EJ-3	MLB-9003-1	CC-17-3	Silver	Numerical 7 on Bar
EJ-3-B	MLB-9003-2	CC-17-3B	Silver	Numerical 7 on Bar

1ST. REEL DISCS & STRIPS 3/5 PAYOUT

SP-1	MLB-8508-1	CC-2-1 CC-536-1	Gold Silver
B	MLB-8508-3	CC-5-1 CC-538-1	Gold Silver
R-1-BC	MLB-8508-4	CC-6-1 CC-7-1	Gold Silver

2ND. REEL DISCS & STRIPS 3/5 PAYOUT

SP-2	MLB-8509-1	CC-2-2 CC-536-2	Gold Silver
J-2	MLB-8509-2	CC-52 CC-538-2	Gold Silver

3RD. REEL DISCS & STRIPS 3/5 PAYOUT

SP-3	MLB-8510-1	CC-2-3 CC-536-3	Gold Silver
------	------------	--------------------	----------------

PRICE ON EACH DISC ORDERED - \$3.00

PRICE ON EACH STRIP ORDERED .30