

HOW TO CHEAT CHERRY MASTER AND AVOID BEEN CHEATED

WELL HERE WE GO, YOU PROBABLY THINK THAT I AM GOING TO TELL YOU TO FIND A MACHINE WHERE THE FRUITS BONUS IS DOWN TO ONE AND AT 5000? NO. THAT IS GOOD IDEA BUT WITH MY TRICK YOU CAN GO TO ANY CHERRY MASTER THAT LETS YOU HOLD AT LEAST ON ONE SPIN. THAT MEANS WHEN YOU PRESS THE TAKE BUTTON AFTER A LOSS IT WILL PUT A RED LINE THROUGH THE BEST CHOICE OF WHAT TO HOLD, WHEN YOU TAKE IT. IT SPINS AND KEEPS THOSE 2 CHOICES. THE 1 BAR BONUS GIVES 7 SPINS AND THE BELLS GIVE 3 (ON MOST MACHINES). THE 3 CHERRIES GIVES 1 SPIN WHICH IS ALMOST ALWAYS 4 7'S FOR LIKE 160 CREDITS WITH 8 CREDITS IN. WELL IF YOU HAVE MORE IN YOU WILL WIN MORE. THE TRICK IS TO KNOW WHEN TO BET MORE. FIRST OF ALL I NEVER HOLD BELLS. THEY ARE ONLY 18 CREDITS, THE BONUS USUALLY ALWAYS SUCK. AND IT WILL HIT THEN AUTOMATICALLY. IF YOU THROW THEM AWAY YOU HAVE A BETTER CHANCE AT FRUITS OR 7'S. THE ONES THAT YOU WANT TO HOLD ARE THE ONE BARS AND THE CHERRIES.

WELL ENOUGH OF THAT, THE TRICK IS WHEN YOU SPIN WITH 8 CREDITS AND LOSE, BUT 2 ONE BARS OR CHERRIES SHOW UP, THIS IS WHAT YOU ARE WAITING FOR BONUS. DON'T JUST HOLD IT AND SPIN. FIRST HIT BET 8 TIMES TO GET YOUR BET BACK TO THE ORIGINAL 8 THEN HOLD TAKE DON'T LET GO (WHILE HOLDING SIMULTANEOUSLY HOLD THE BET BUTTON DOWN UNTILL THE MAX CREDITS ARE IN (OR AT LEAST A LARGER DESIRED AMOUNT). IF YOU LET IT GO TO 32 IT SHOULD SPIN AUTOMATICALLY, BUT SOME MACHINES GO TO 64 AND THEN SPIN AUTOMATICALLY.

IF YOU HIT NOTHING IT REALLY SUCKS BUT WHEN YOU DO HIT WOW "DOWNS I HIT". REMEMBER: DON'T HIT TAKE FIRST. NO RED LINE CAN BE ON THE SCREEN. FIRST PUT ORIGINAL BET IN, THEN HOLD TAKE AND SIMULTANEOUSLY HOLD BET TILL IT SPINS OR HIT SPIN SIMULTANEOUSLY AFTER A DESIRED AMOUNT ARE IN. LIKE 16 OR 24 CREDITS IS A GOOD ONE TO START OUT ON TO GET A FEEL TRY THIS AT MANY PLACES AND FIND THE ONE THAT SEEMS TO BE THE BEST.

MY FAVORITE ONE, YOU CAN ONLY HOLD ONCE, BET A MAX OF 32 AND THE FRUITS GO UP TO ONLY 2000. BUT THIS ONE PAYS OUT THE BEST. I PULLED 9000 THOUSANDS CREDITS OF IT IN ONE WEEK. NOW I AM BEEN BANNED FROM IT. SO I TELL MY FRIENDS THE SECRET THE COOLEST ONE HIT WAS HOLDING 2 CHERRIES GOING FOR THE 3RD. SO I COULD WIN 640 CREDITS. WELL I HIT THE 3RD CHERRY AND I ALSO HIT IT 2 OTHER WAYS. IT HIT 640 CREDITS 2 OTHER TIMES, A GRAND TOTAL OF 1920 CREDITS ON ONE SPIN. I ALSO HIT ALL FRUITS WITH 32 IN GOING FOR THE CHERRIES. THAT GIVE ME 480 PLUS THE POOL OF 2000.


NOW YOU KNOW MY SECRET, USE IT WISELY.

HOW TO AVOID BEEN CHEATED.....

TAKE THE GROUND THAT GOES TO THE PUSH BUTTONS AND CONNECT IT TO THE COM (COMMUN) ON THE SWITCH (TAKE SCORE) AND TAKE THE NC (NORMALLY CLOSE) AND GROUND THE REST OF THE BUTTONS. LEAVE THE NO (NORMALLY OPEN) FOR THE TAKE SCORE OR TAKE BUTTON.

THIS WORKS BECAUSE WHEN YOU PUSH TAKE AND HOLD IT, IT REMOVES THE GROUND TO THE OTHER BUTTONS AND TRICK CAN NOT BE DONE.

SEE ELECTRIC CIRCUIT BELOW:

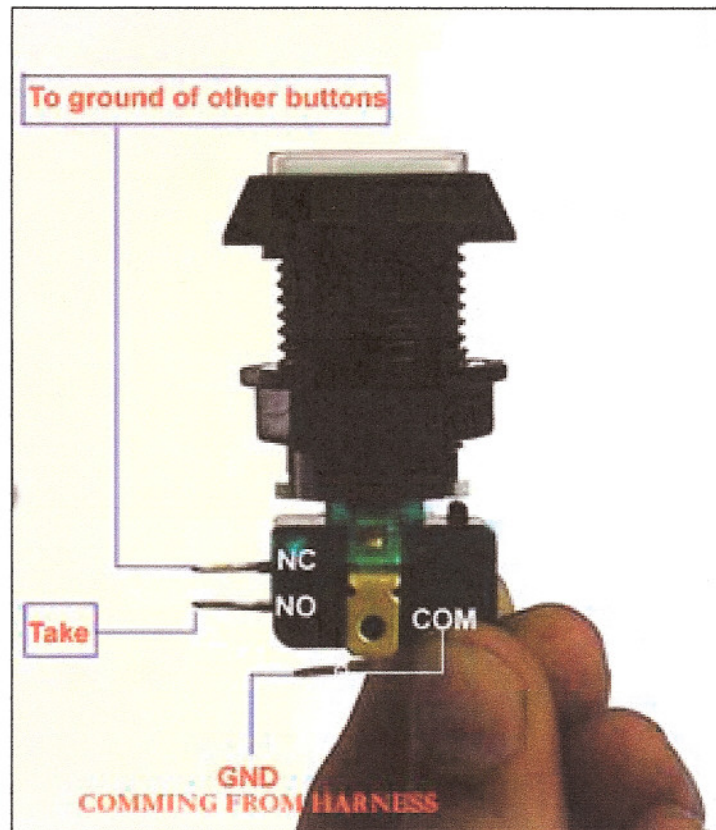


Regular wiring



Ground wire is daisy chained to common of all switches

New Revised wiring

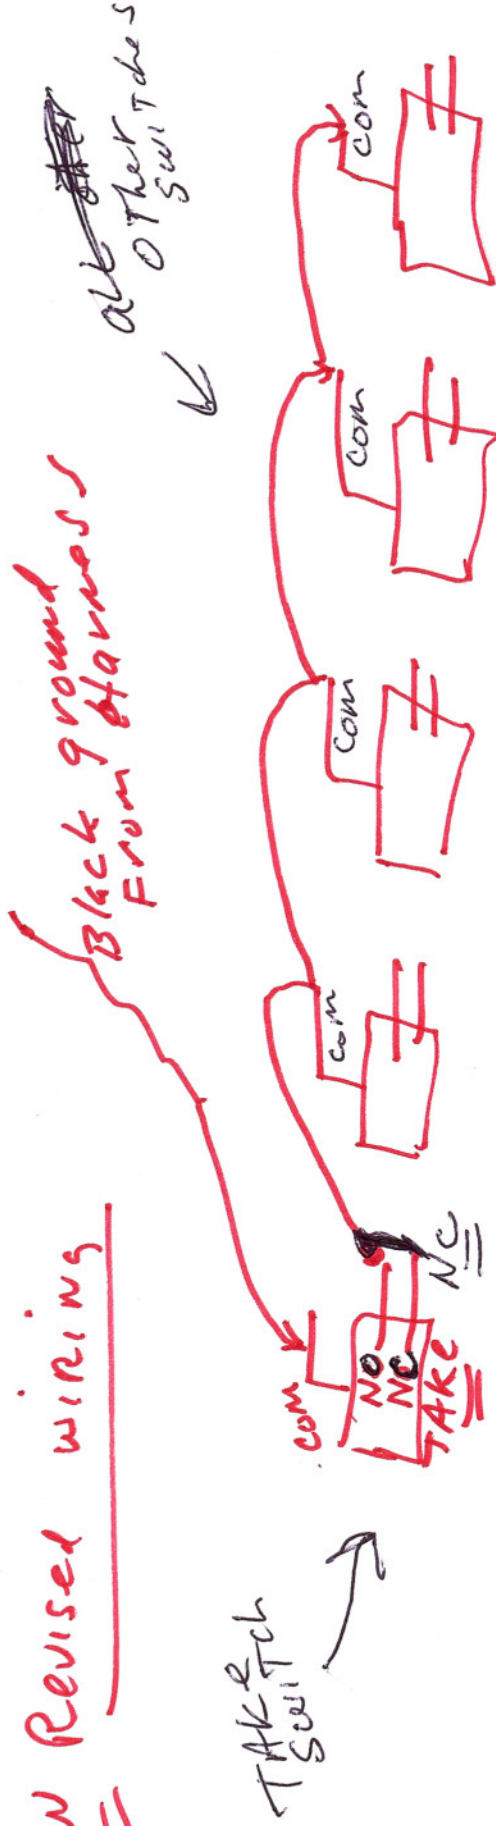

- ① Take Black wire from Harness and attach to Common on Take Switch
- ② Take the wire from N/c (normally closed) side of Take Switch to all other commons on switches
- ③ Take wire from all switches and connect to common ground