

# FRUIT BONUS 2<sup>nd</sup> Generation™ ©2004 AMCOE INC.

PIN	PARTS SIDE	SOLDER SIDE	PIN
1	VIDEO RED	VIDEO GREEN	1
2	VIDEO BLUE	VIDEO SYNC	2
3	SPEAKER +	SPEAKER -	3
4	EXTRA - STOP 1		4
5	EXTRA - STOP 2	EXTRA - ALL STOP	5
6	EXTRA - STOP 3		6
7	TICKET OUT BUTTON - panel		7
8	TICKET NOTCH - dispenser		8
9	<b>START / TAKE</b>		9
10	<b>STOP 2 / SMALL (SHARED)</b>		10
11	<b>PLAY</b>		11
12	<b>STOP 3 / TAKE (SHARED)</b>		12
13	<b>STOP 1 / DOUBLE (SHARED)</b>		13
14			14
15			15
16	<b>ALL STOP / BIG (SHARED)</b>		16
17			17
18	COIN IN	NOTE IN	18
19	SERVICE IN		19
20	ACCOUNT / PRINTER SET UP	CONFIRM / MONITOR SET UP	20
21	HOPPER PAYOUT - panel	CLEAR / PRINTER PRINT - panel	21
22		*HOPPER SWITCH - hopper	22
23	COIN IN METER		23
24	NOTE IN METER		24
25			25
26			26
27	HOPPER METER		27
28	CLEAR / TICKET / PRINTER METER		28
29	<b>START / TAKE LAMP</b>	EXTRA - ALL STOP LAMP	29
30	<b>STOP 2 / SMALL LAMP (SHARED)</b>	EXTRA - STOP 1 LAMP	30
31	<b>PLAY LAMP</b>	EXTRA - STOP 2 LAMP	31
32	<b>STOP 3 / TAKE LAMP (SHARED)</b>	EXTRA - STOP 3 LAMP	32
33	<b>STOP 1 / DOUBLE LAMP (SHARED)</b>		33
34	<b>ALL STOP / BIG LAMP (SHARED)</b>		34
35			35
36	GND	GND	36

PIN	PARTS SIDE	SOLDER SIDE	PIN
1	GND	GND	1
2	GND	GND	2
3	+5V	+5V	3
4	+5V	+5V	4
5	+12V	+12V	5
6	+12V	+12V	6
7	TICKET DISPENSER ENABLE		7
8	HOPPER SSR		8
9	GND	GND	9
10	GND	GND	10

\* HOPPER SWITCH - auto detect normal low (mostly micro switch type) or normal high (mostly sensor type)  
 SHADED PIN OUTS ARE NOT AVAILABLE IN LIMIT WIN VERSION  
 STOP BUTTONS: SELECT SHARED BUTTON OR EXTRA BUTTON CONFIGURATION.


# FRUIT BONUS 2<sup>nd</sup> Generation™ ©2004 AMCOE INC.

## New S2000C board

The new S2000C board is a powerful platform designed to give sophisticated performance, special visual effects, finer resolutions, communication capabilities, and to make it a more cost-effective investment.

There are 3 communication ports on the board. The RS232 port is primarily used to drive printer to print tickets without any interface. It can also be used to download / upload data and instructions from / to PC. To drive a printer to print ticket, simply connect with a 25 pin one-to-one straight through cable to the serial port of the printer. Printer ticket set up can be done on screen (or download from PC - SEE MANUAL OF PC DOWNLOAD). Go to Account Screen and follow instructions. The following printer settings have to be adjusted on the printer: BAUD RATE = 9600, WORD LENGTH = 8 BITS, PARITY = NO. Also, SW1 next to the RS232 port has to be set correctly (see other pages of this manual).


The other 2 communication ports (using RJ45 connectors) are mainly for linking with other S2000 / S2000C boards or Link Control Unit.

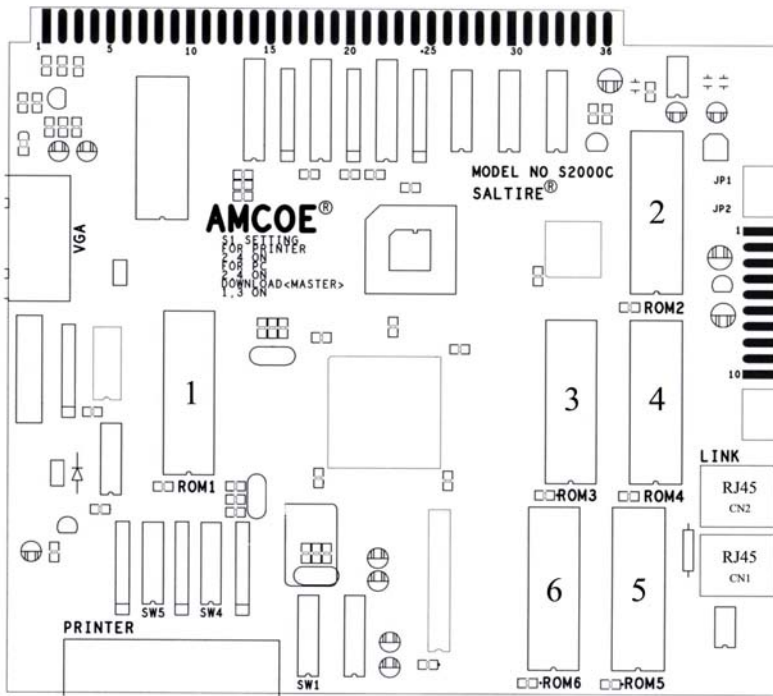

Application such as linking progressive bonus of all the machines together to display on screen in real time can be done efficiently (see manual of LINK). CAT5 patch cables are used. To connect with S2000 board or Link Control Unit with older type 3 pin connector (not RJ45), a small connection interface board is available.

S2000C platform is also capable of driving VGA high-resolution monitor with VGA program ROMs and certain components added / changed on the board. With VGA mode game, a VGA connector will be present on the board with necessary components added / changed. There is no need to connect video signals from the edge connector. (VGA mode game is an independently designed game and is not a version of a CGA mode game. Thus, games available in standard CGA mode will not be available in VGA mode.)

**S2000C is password protected.** Password is ***user defined***. It must be 6 digits. There is no toggle switch for reset on the board. Reset is divided into two parts, either reset both Adjustment and Data or Data only. Certain situations require reset action, such as after change of program or program error. Password is needed to reset and to change on screen adjustments. User Password, Power On count, In Meter and Out Meter will not be reset. In Meter and Out Meter are 6 digits, working exactly the same as mechanical ones.

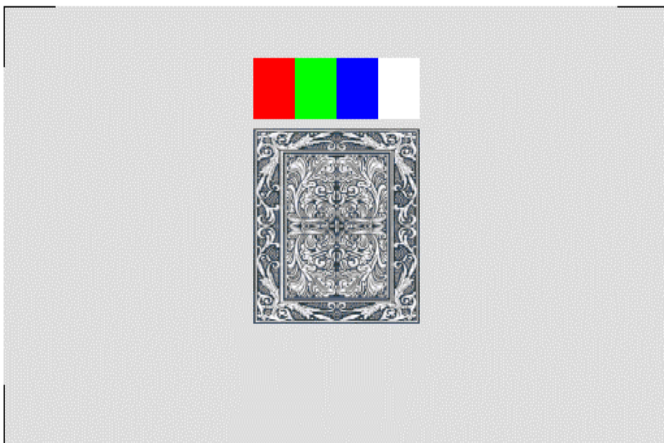

### MONITOR ADJUSTMENT (CGA mode)

The resolutions of S2000C are 33.3% more than that of New Cherry '96. Sync, V-size, V-pos, H-pos,...etc. may have to be adjusted. After reset or existing Confirm Screen, a test screen (similar to left shown) will come up.

1/ Dip SW 5 # 1 - "OFF" Korean made (most USA brands) monitor; "ON" Taiwanese made.

2/ Adjust Sync of monitor to get a stable picture.

3/ Adjust V-size, V-pos, H-size, and H-pos such that all 4 white corner brackets (right-angled shape) can be seen and are a little bit away from the curving edges of the monitor.

4/ Adjust color purity. Most monitors may look fine without further adjusting colors, but a re-adjustment will make sure true color representations, not only for the S2000C board

but for all other games. There are 4 color bands, a gray & white card, and 4 white corner brackets on the test screen. The 4 color bands are (pure) red, green, blue, and white. Turn brightness on until background is no longer "black" and turn RGB to the lowest. Turn G up until flare comes out (like a shadow going outside the edge) on white; then, reduce gradually until the flare "just" disappears. Do the same thing with R and B one by one. Lastly, reduce brightness until background is "black". There are 4 fine tuning adjustments of horizontal and vertical positions using the software of the program. See on screen instruction.

# FRUIT BONUS 2<sup>nd</sup> Generation™ ©2004 AMCOE INC.

DIP SW 5		1	2	3	4	5	6	7	8
MONITOR TYPE	KOREAN MADE TAIWANESE MADE	OFF ON	For most monitors used in USA						
UNIT ID SETUP FOR PROGRESSIVE LINK BONUS Each Unit in the Link System must has a unique ID. Monitor used must has an isolation transformer or built- in isolation circuit. Two or more units having the same ID or monitor without an isolation transformer will DAMAGE the board. (Link Control Unit and CAT5 patch cable required. To connect with older type 3 pin link connector, a small connector interface board is required. Just one is needed in the entire link system.)	NO LINK UNIT 1 UNIT 2 UNIT 3 UNIT 4 UNIT 5 UNIT 6 UNIT 7 UNIT 8 UNIT 9 UNIT 10 UNIT 11 UNIT 12 UNIT 13 UNIT 14 UNIT 15		OFF ON OFF ON OFF ON OFF ON OFF ON OFF ON OFF ON OFF ON	OFF OFF ON ON OFF ON ON OFF OFF ON ON OFF ON ON ON ON	OFF OFF OFF OFF ON ON ON OFF ON ON ON ON ON ON ON ON	OFF OFF OFF OFF ON ON ON OFF ON ON ON ON ON ON ON ON			
NO USE	MUST BE								OFF

All selections are made on screen or by PC DOWNLOAD except those listed in Dip SW 5. **NOTE: Dip Switch 4 MUST BE OFF.**

Please go to Confirm Screen and following on screen instructions to adjust available selections. Different versions may have different available selections and selectable ranges. Check Confirm Screen and make necessary adjustment to suit your operation.

Selections that can be adjusted on screen (**NOT** for all versions) are as follow:

**LEVEL OF DIFFICULTY:** Default is Level 6.

**COIN IN TO POINT:** It relates to 36 pin edge connector part side 18. 1 pulse in = ? (Only 5 and 25 in LIMIT WIN Version. See Page 4.)

**NOTE IN TO POINT:** It relates to 36 pin edge connector solder side 18. 1 pulse in = ?

**COIN IN LIMIT:** Set the COIN IN limit.

**MIN PLAY TO START:** Min point(s) required to start to play a game.

**MIN PLAY FOR BONUS:** Min points required in order to get bonus features.

**MAX PLAY:** Max points which can be played in a game.

**BONUS 1 BASE:** The starting bonus point of Bonus 1 at PLAY=240. Automatically calculate according to PLAY during game play.

**BONUS 1 MAX:** The maximum bonus point of Bonus 1 at PLAY=240. Automatically calculate according to PLAY during game play.

**BONUS 2 BASE:** The starting bonus point of Bonus 2 at PLAY=240. Automatically calculate according to PLAY during game play.

**BONUS 2 MAX:** The maximum bonus point of Bonus 2 at PLAY=240. Automatically calculate according to PLAY during game play.

**BONUS ACCUMULATE:** YES (progressive from Base to Max), NO (fixed at Max).

**FIXED BONUS 3:** Fixed bonus point at PLAY=240. Automatically calculate according to PLAY during game play.

**BONUS 3 PERCENT:** Four selections.

**CLEAR / TICKET UNIT:** It relates to 36 pin edge connector part side 28. Each pulse out = ? Point(s).

**TICKET MODE:** It relates to above and regulates max ? pulse(s) out each game. Continuous = no limit.

**TICKET OUT:** It can be Printer Direct\*, Ticket Dispenser Direct Drive (TDDD), or Interface.

**PRINTER TYPE:** Use one central printer via Link Control Unit (VIA LINK) or individual printer installed in machine (USE SELF).

**PRINTER COMMAND:** CBM1 (Citizen) (default), ESC/POS (Epson), STAR emulation, Ithaca 70.

**HOPPER UNIT USE:** Use COIN IN or CLEAR / TICKET UNIT as reference.

**CHANGE PASSWORD:** Select YES when you want to change User Defined Password. Factory Default = 123456

**USE SCORE:** If yes, "SCORE" will appear on screen. All points won will be collected to "SCORE". Default = NO.

**SCORE OUT:** Manual (default) or Auto.

**LIMIT SCORE PER GAME:** Limit SCORE per game play to 10xplay or an equivalent of \$5 whichever is less. (Use LW Version instead.)

**PLAY REMAIN SCORE:** Only when "SCORE" appears on screen. Play directly from "SCORE" when no point left in POINT column.

**COUNT GAME:** This is an advanced count game feature counting eligible pulses out based on TICKET MODE.

**SHOW ACCOUNT:** If no, there is no account information on Account Screen.

**WITHOUT ODDS TABLE:** Show odds table on screen or not. YES = do not show; NO = show.

**STOP BUTTONS:** SHARED BUTTON or EXTRA BUTTON.

**SKILL SPIN:** A non-stop spinning condition and manual stop is mandatory.

**REEL SPEED:** NORMAL or SLOW (default).

**DOUBLE GAME:** YES (default) or NO.

**WIN LIMIT:** Default = \$5 & 10X (check whichever is less) or \$5 ONLY (do not check 10X). (Available in LIMIT WIN VERSION program only.)

Additional selections not mentioned here may be available in some versions.

**CAUTION: Factory is unable to retrieve your User Defined Password. You must remember it yourself.**

**WARNING: DO NOT PUT IN PROGRAM ROM THAT IS NOT DESIGNED FOR THIS GAME.**

\* When using Printer Direct, please go to Account Screen then Printer Ticket Set Up. Remember to do Printer Ticket Set Up again after reset of board!

SHADED ADJUSTMENT SELECTIONS ARE NOT AVAILABLE IN LIMIT WIN VERSION.

Access the Link Control Unit (the program of the Link Control Unit must be Version 1.9 or newer): When in LINK, go to Account Screen. Press ACCOUNT button once will go to a download page. Account information of the entire Link System will be downloaded to the screen. After viewing, follow instruction on screen to (1) erase the recent record inside the Link Control Unit, if wanted to, or (2) exit .

# FRUIT BONUS 2<sup>nd</sup> Generation™ ©2004 AMCOE INC.

\*PRINTER: BAUD RATE = 9600, WORD LENGTH = 8 BITS, PARITY = NO.  
 (Dip SW settings of Citizen iDP3540/3541 = DS1 # 1,8 ON; DS2 # 2,5,6,7 ON. Check the manual of printer for correct settings.)

SW 1	RS232	1	2	3	4	5	6	7	8
Model S2000C	DRIVE PRINTER PC DOWNLOAD	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF

(The alarm light of 3550/3551 has to be ON all the time in order to print. 3540/3541/3550/3551 alarm light can be ON all the time)

In Printer Ticket Set Up, there are 3 entries that need to be done carefully. (Others are mainly text messages.)

**POINT VALUE:** It is the \$ value of each point. Immediately after reset, program will detect coin in setting and use the following COIN MODE table to assign the \$ value of each point. It can be changed when not using LIMIT SCORE.

**TICKET LIMIT:** Default is \$00.00, meaning no limit. The maximum \$ value of a single ticket can be limited from \$1 to \$99. (CAUTION: do not set TICKET LIMIT-except \$00.00-less than POINT VALUE.)

**PRINT \$ or POINT on ticket:** Select between DOLLAR and POINTS (default).

**Adjust Ticket Setting and Game Setting by PC DOWNLOAD**



S2000C PC DOWNLOAD PROGRAM is distributed FREE. It runs on PC with Windows 95/98. You may obtain a free copy on a 3.5" disk or by downloading it from the internet\*. A HELP file will come up the first time you use it after installation. You will find all necessary information on how to adjust BOTH Ticket Setting and Game Setting of your board by PC. PC Download Program will be especially useful in printer ticket set up. Typing name, address, machine number,...etc. will be much faster on a computer than through on screen input. On your S2000C board, go to Account Screen and press <DOUBLE> to go to PC download mode. Also, remember to set Dip SW S1 (near the RS232 port) of the board to PC download mode during PC download. Press <TAKE> to exit PC download mode.

\* <http://www.amcoe.com>

COIN MODE	COIN IN SETTING	BILL ACCEPTOR SELECTION		\$1 = ? POINTS	LIMIT SCORE
		\$1 = 1 PULSE	\$1 = 4 PULSES		MAX \$5 = ? POINTS
\$1 = 1 PT.	1	YES		1	DO NOT USE
\$0.50 = 1 PT.	2	YES		2	10
\$0.25 = 1 PT.	1		YES	4	20
	4	YES			
\$0.10 = 1 PT.	10	YES		10	50
\$0.05 = 1 PT.	5		YES	20	100
	20	YES			
\$0.01 = 1 PT.	25		YES	100	500
	100	YES			


**Ticket Dispenser Connection Diagram**

DL-1275 (verify pinouts on manual of ticket dispenser)

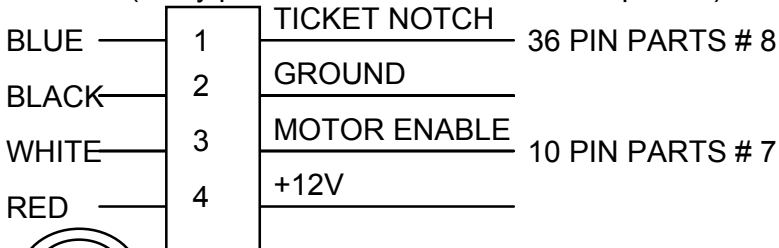

TICKET OUT BUTTON on control panel connect to 36 PIN PARTS # 7

**Hopper Connection Diagram**

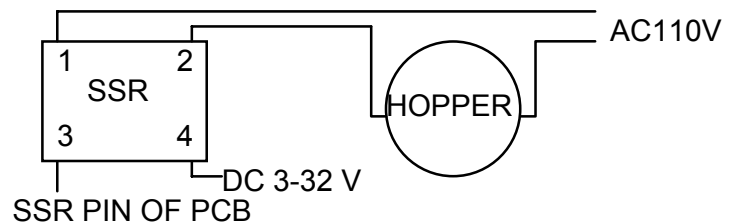

# FRUIT BONUS 2<sup>nd</sup> Generation™ ©2004 AMCOE INC.

To name a game "2<sup>nd</sup> Generation" of a history making one is a pressure.  
 To design the second generation of a famous game is a difficult mission.  
 To make the second generation performs better than the first is a challenge.

After careful analysis, lengthy screening process and meticulous programming work, the original design team of New Fruit Bonus '96 has finally concluded the construction of "FRUIT BONUS 2<sup>nd</sup> Generation" eight years after the release of its predecessor.

FRUIT BONUS 2<sup>nd</sup> Generation has its own style and characteristics. It inherits the good traits of its predecessor but does not resemble its predecessor. FRUIT BONUS 2<sup>nd</sup> Generation – a must for previous and existing user of New Fruit Bonus '96!

Free Spin Game: In the Main Game, each ANYBAR-ANYBAR-ANYBAR line will get 5 Free Spin Games; each BAR1-BAR1-BAR1 line will get 7 Free Spin Games; each BAR2-BAR2-BAR2 line will get 9 Free Spin Games; each BAR3-BAR3-BAR3 line will get 11 Free Spin Games.

Dog Bonus: In the Main Game or Free Spin Game, each DOG-DOG-DOG win line will get one Dog Bonus Game. In a Dog Bonus Game, there is unlimited number of chance for the dog to fetch an object. Each object has a value. A Dog Bonus Game ends only when the dog fetches a boot. The value of each object is shown on screen.

Diamond Bonus: In the Main Game or Free Spin Game, each DIAMOND-DIAMOND-DIAMOND win line will get one Diamond Bonus Game. In a Diamond Bonus Game, nine dogs will run then, one by one, each will drag out either a diamond or nothing. There are 3 types of diamond and each type has different value.

All mixed DOG, DIAMOND and TREASURE BOX Progressive Bonus: Bonus point varies with PLAY level besides gradual accumulation (if Bonus Accumulation = YES). In the Main Game or Free Spin Game, all 9-mixed DOG, DIAMOND and TREASURE BOX will get this bonus.

888 Progressive Bonus: Bonus point varies with PLAY level besides gradual accumulation (if Bonus Accumulation = YES). In the Main Game or Free Spin Game, one or more **888** win line(s) will get this bonus.

X CHERRY Fixed Bonus: In the Main Game or Free Spin Game, both Line 4 and Line 5 = CHERRY-CHERRY-CHERRY, like an " X " configuration, will get this bonus. Bonus point varies with PLAY level but fixed with no accumulation.

Double Game: There are 7 cherries, meaning 7 chances. Red Cherry X2; Blue Cherry x3. Underneath the cherry there is a number. 1 to 6 is small; 7 is always win; 8 to 13 is big. It is very simple, just choose big or small. Only 13 numbers (1...13) are used and a total of 7 numbers (out of 13 numbers) will be used.

Re-spin of 8: In the Main Game or Free Spin Game, any reel that comes up with an **8** and does not form winning combination will re-spin again. In the re-spin, any symbol other than **8** may come out.

Dog Walk: In the Main Game or Free Spin Game, any DOG that cannot form winning combination will walk away and drag out a symbol, which can be any symbol except **8** and DOG.

LINK BONUS: Link with other S2000 and S2000C series games. All Mixed BAR is reserved for hitting the LINK BONUS. See the manual of LINK as well.

# FRUIT BONUS 2<sup>nd</sup> Generation™ ©2004 AMCOE INC.

## PUSH BUTTON LEGEND

<b>ALL STOP BIG</b>	<b>STOP 1 DOUBLE</b>	<b>STOP 2 SMALL</b>	<b>STOP 3 TAKE</b>
-------------------------	--------------------------	-------------------------	------------------------

<b>TAKE START</b>	<b>PLAY</b>
-----------------------	-------------

START BUTTON ALSO ACTS AS TAKE BUTTON

<b>ALL STOP BIG</b>	<b>STOP 1 DOUBLE</b>	<b>STOP 2 SMALL</b>	<b>STOP 3 TAKE</b>
-------------------------	--------------------------	-------------------------	------------------------

<b>PLAY</b>	<b>TAKE START</b>
-------------	-----------------------

## SHARED BUTTON CONFIGURATION

<b>TAKE START</b>	<b>ALL STOP</b>	<b>STOP 1</b>	<b>STOP 2</b>	<b>STOP 3</b>
<b>PLAY</b>	<b>BIG</b>	<b>DOUBLE</b>	<b>SMALL</b>	<b>TAKE</b>

START BUTTON ALSO ACTS AS TAKE BUTTON

<b>TAKE START</b>	<b>ALL STOP</b>	<b>STOP 1</b>	<b>STOP 2</b>	<b>STOP 3</b>
<b>PLAY</b>	<b>BIG</b>	<b>DOUBLE</b>	<b>SMALL</b>	<b>TAKE</b>

## EXTRA BUTTON CONFIGURATION